

Spectralink S35 Handset

Quick Start Guide



Note: If a menu, submenu, setting or a function is not visible, it is controlled by a local administrator. Contact them if a change is needed.

Remove the tape protecting the battery contacts before charging. Charge your handset for 4 hours prior to first use for best performance.

Turning Handset On

- Press to turn the handset on.

Turning Handset Off

1. Hold until the question “Turn off?” appears in the display.
2. Press to confirm.

Adjusting Speaker/Headset Volume

- While on call, press the **Volume Control** keys on the upper left side of the handset to adjust the volume.

Adjusting Ring Volume

1. Press to enter the main menu.
2. Scroll to **Audio** and press .
3. Scroll to **Ring Volume** and press .
4. Press the **left or right side of the navigation key** to adjust the volume of the ring tone.
5. Press to save your changes.

Changing Ring Tone

1. Press to enter the main menu.
2. Scroll to **Audio** and press .
3. Scroll to **Ring Tone** and press .
4. Scroll to the desired ring tone and press the **right side of the navigation key** to listen to the ring tone.
5. Press the **left side of the navigation key** to listen to the internal calls ring tone.
6. Scroll to the desired ring tone, and press to select the new ring tone.

Off Hook Dialing (Dial Directly)

1. Press .
2. Dial number.
3. Press to end the call.

On Hook Dialing (Pre-Dial)

1. Dial number.
2. Press to initiate the call.
3. Press to end the call.

Speed Dial Calls

- Press and hold a key (0-9) for three seconds, until the call is initiated.

Answering and Ending Calls

- To answer a call, press .
- To end a call, press .

Call List Calls

1. Press the **left side of the navigation key** to enter the **Call List**.
2. Scroll to the desired name or number, and press .

Call Missed Calls

1. Press the **right side of the navigation key** to enter the **Missed Call List**.
2. Scroll to the desired name or number, and press .

Phone Book Calls (Local)

1. Press the **bottom of the navigation key** to enter the local phonebook.
2. Scroll to the desired name, and press to make a call.



- 1 Programmable Side Key
- 2 Display
- 3 Volume Control
- 4 LED
- 5 Alarm Key
- 6 Headset Connector
- 7 Left Softkey
- 8 Middle Softkey
- 9 Right Softkey
- 10 Loudspeaker Key
- 11 Mute/Menu Key
- 12 Four Way Navigation Key
- 13 Off Hook Key
- 14 On Hook Key
- 15 Microphone

Company Phone Book Calls

1. While on hook, press the **top of the navigation key** to enter the company phonebook.
2. Search for a name, press **✓**, then scroll to the desired number and press **Dial** or .

Adding a New Contact to Contacts

1. Press **≡** to enter the main menu.
2. Scroll to **Contacts** and press **✓**.
3. Scroll to **Local Contacts** and press **✓**.
4. Scroll to **Add name/number** and press **✓**.
5. Type the name of the contact using the keys 0-9.
6. Scroll to number and enter the directory number/SIP extension of the contact (max. 24 digits/64 characters). Before entering a SIP URI, press and hold **#** until **SIP:** is shown.
7. Press **↓** to store the name and directory number/SIP extension.

Assigning Speed Dials

1. Press **≡** to enter the main menu.
2. Scroll to **Contacts** and press **✓**.
3. Scroll to **Speed Dial** and press **✓**.
4. Scroll to **Add to Speed Dial** and press **✓**.
5. Scroll to the desired speed dial position and press **⚙️**. If the position is occupied, press **✓** to replace the existing speed dial.
6. Scroll to the desired contact and press **✓**.

Locking/Unlocking Keypad

- While on the home screen, press **≡** (Left Softkey) followed by the ***** button to lock or unlock the keypad.

Silent Mode On/Off

- While on the home screen, press **≡** (Left Softkey) followed by the **#** button to turn the handset silent mode on/off. In silent mode there is no sound for incoming calls and notifications.

Exit Menus

- To exit menus and return to the home screen, press **↶**.

Loudspeaker On/Off

- While in a call, press **🔊** to enable or disable the loudspeaker.

Microphone Mute On/Off

- While in a call, press **🔇** to mute the microphone. To unmute the call, press **🔇**.
- Alternatively, while in a call, press **≡** to mute/unmute the call.

Handset Icons

	Missed calls
	Incoming calls
	Battery charging (in charger)
	Battery charging (handset turned on in charger)
	Battery capacity decreasing (handset out of charger)
	Battery capacity low
	Message received
	Keypad or screen locked
	Silent mode
	Appears when loudspeaker is turned on
	Microphone muted

Technical Specifications

Battery and Handset Capacity

- Removable and replaceable 1800mAh battery
- Active talking time up to 24 hours.
- Standby time up to 160 hours.
- Charge time under 4 hours

Durability / Ruggedness

- IP65 water jet resistance and full dust protection.
- Exceeds MIL-STD-810H drop tests.
- Atmospheric resistance tested – salt and fog.
- Health-grade plastic material withstands daily disinfectant cleaning and UV-C lamps.
- Resistant to abrasion (RCA Abrasion tested).

Environmental

- Operating temperature range: -20° to 55°C / -4° to 131°F.
- Charging temperature range: 0° to 43°C / 32° to 109°F.
- Storage temperature range: -40° to 70°C / -40° to 158°F.

Interface and Features

- Alarm key.
- Low impedance headset amplifier.
- Programmable side key.