

Telecare Alarm Unit Aid Link 5000

A complete Telecare package, designed to be both compact & durable.

- Class 1 compliant emergency communication
- BT 21CN compatible
- Full range of Telecare peripherals
- High quality audio

Whether a resident is in a sheltered accommodation or a loan worker connecting to our 24 hr Emergency Response Centre, our Aid Link 5000 Telecare unit provides state of the art design features and functionality. High quality sound is provided by a powerful intercom unit integrated into the terminal for better quality hands-free conversations. The slim line, ergonomic unit has easily recognisable buttons and can be installed on a table or a wall mount.

The Aid Link 5000 alarm unit also offers true Telecare facilities by storing all alarm and activity data in local memory. This data can be downloaded and analysed remotely using its built-in high speed modem and specialist care software. The Aid Link 5000 also retains the alarm signalling capabilities of traditional dispersed alarm units to ensure compatibility with existing Alarm Receiving Centres.



Aid Link
5000



Personal
Pendant



Telecare Alarm Unit Aid Link 5000

Aid Call Ltd Healthcare Communications • Linhay House • Linhay Business Park • Ashburton • Devon TQ13 7UP
FREEPHONE SALES 0800 052 3616 • F 01364 651451 • E healthcaresales@aidcall.co.uk
CUSTOMER SERVICES 0845 600 3734 • F 01626 834943 • E customer.services@aidcall.co.uk
www.aidcall.co.uk/healthcare

Specification Summary

Features:

- Suitable for table or wall mounting
- Optional integral alarm pullcord (if wall mounted)
- Simple installation using polarised plug-in leads
- 3 metre mains and BT leads provided
- Fully programmable with easy-to-navigate menus
- 2 line x 16 character backlit LCD display
- Large illuminated alarm call button & front status LED
- Voice reassurance messages
- High quality half duplex or VOX speech (5 vol levels)
- Real time clock & daily alarm function with auto-BST
- Activity monitoring & intruder modes (PIR required)
- User recordable reminder function (V2.0 onwards)
- 12 month (10K event) alarm & activity log memory
- Programmable hardwired I/O (4 inputs/1 output)
- Integral 169MHz FM receiver (max 32 radio devices)
- Integral V92 high speed modem with CLI monitor
- RS485 data communications port
- Telephone line fault monitoring
- Mains supply fault monitoring
- 24 hour battery standby with intelligent charging
- BS7369 & TTMV protocols
- Dimensions: 145 x 235 x 75 mm (HxWxD)

Personal Pendant Features:

- One personal pendant supplied per Aid Link 5000
- Fully sealed waterproof case
- Neck cord with anti strangle safety device
- Wrist strap & belt clip wearing options also supplied
- Soft alarm call pushbutton & red LED reassurance
- 27000 operations or 5 years battery life
- Low battery warning
- Accessory control button (door opener etc)
- Dimensions: 57 x 34 x 16 mm (HxWxD)

Aid Link 5000 Options:

- Maximum of 32 radio devices per Aid Link 5000
- Hardwired PIR (for activity/intruder monitoring)
- Hardwired I/O interface unit
- Man Down trigger for use as loan worker system
- PIR, Smoke and Heat Detectors




Wrist
Pendant



Fall
Detector



PIR
Detector

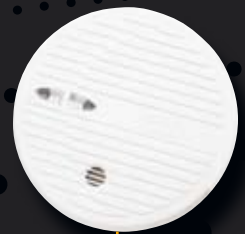

Smoke
Detector