



Spectralink S35 Handset

User Guide

Copyright Notice

© 2013–2024 Spectralink Corporation All rights reserved. Spectralink™, the Spectralink logo and the names and marks associated with Spectralink's products are trademarks and/or service marks of Spectralink Corporation and are common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Spectralink.

All rights reserved under the International and pan-American Copyright Conventions. No part of this manual, or the software described herein, may be reproduced or transmitted in any form or by any means, or translated into another language or format, in whole or in part, without the express written permission of Spectralink Corporation.

Do not remove (or allow any third party to remove) any product identification, copyright or other notices.

Notice

Spectralink Corporation has prepared this document for use by Spectralink personnel and customers. The drawings and specifications contained herein are the property of Spectralink and shall be neither reproduced in whole or in part without the prior written approval of Spectralink, nor be implied to grant any license to make, use, or sell equipment manufactured in accordance herewith.

Spectralink reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Spectralink to determine whether any such changes have been made.

NO REPRESENTATION OR OTHER AFFIRMATION OF FACT CONTAINED IN THIS DOCUMENT INCLUDING BUT NOT LIMITED TO STATEMENTS REGARDING CAPACITY, RESPONSE-TIME PERFORMANCE, SUITABILITY FOR USE, OR PERFORMANCE OF PRODUCTS DESCRIBED HEREIN SHALL BE DEEMED TO BE A WARRANTY BY SPECTRALINK FOR ANY PURPOSE, OR GIVE RISE TO ANY LIABILITY OF SPECTRALINK WHATSOEVER.

Warranty

The Product Warranty and Software License and Warranty and other support documents are available at <http://support.spectralink.com/>.

Contact Information

US Location

+1 303-441-7500

Spectralink Corporation
305 S. Arthur Ave.
Louisville, CO 80027
USA

info@spectralink.com

Denmark Location

+45 7560 2850

Spectralink Europe ApS
Bygholm Soepark 21 E Stuen
8700 Horsens
Denmark

infoemea@spectralink.com

UK Location

+44 1344 206591

Spectralink Europe UK
The Lightbox, Willoughby
Rd, Bracknell, RG12 8FB
United Kingdom

infoemea@spectralink.com

Contents

Getting Started	6
Handset Information	6
Battery and Charger Information	8
Cleaning Your Handset.....	13
Turning Handset On/Off.....	14
Accessories	14
About Your Handset	17
Handset Keys	17
Handset Characters.....	18
Handset Display.....	21
Navigating the Handset	26
Hearing Aid Compatibility (HAC)	28
Adjusting Speaker Volume	28
Locking Keypad	28
Setting Screen Security	29
Making Calls	32
Making Internal/External Calls	32
Off Hook Dialing (Dial Directly)	32
On Hook Dialing (Dial Directly)	32
Dial from Contacts (Local)	32
Dial from Call List.....	33
Dial from Call History	33
Speed Dial	34
Initiating Ad-hoc Conference Call	34
Central Contacts (System Dependent)	35
Answering Calls.....	37
Answering/Ending a Call.....	37
Auto Answer	37
Muting a Call.....	38
Rejecting a Call.....	38
During Calls	39
Call Transfer	39
Call Hold	39
Call Waiting.....	39

Call Forward Unconditional (CFU).....	40
Turning Speakerphone Mute On/Off.....	40
Turning Microphone Mute On/Off	40
Enter Contacts (Local).....	41
Enter Contacts (Company)	41
Using Shortcuts	42
Types of Shortcuts.....	42
Predefined Shortcuts	42
Personal Shortcuts	43
Side Key Shortcuts	44
Using the Menu	45
Description of Menus	45
List of Menu Functions.....	47
Contacts.....	51
Using Alphanumeric Keyboard	51
Managing Contacts.....	52
Speed Dial	57
Call History	59
Incoming Calls	59
Outgoing Calls	60
Missed Calls	62
Delete Call History	63
Messages	65
Writing, Sending and Saving Messages	65
Using Templates.....	67
Reading Messages.....	69
Replying to Messages	69
Deleting Messages	72
Audio	74
Profiles.....	75
Audio Settings	76
Bluetooth	78
Settings	82
Messaging	82

Handset 84

About 86

Call options 87

Security 90

System 90

Handset 92

Alarm button 95

 Using the Alarm Button 95

 Defining Alarm Settings 96

Updating Firmware 97

Product Compatibility 98

Technical Specifications 99

FCC Compliance Statement 102

Industry Canada Compliance Statement 104

Getting Started

It is recommended that you read all the information in this section before you use your handset.

Safety and Handling information is available online at <https://support.spectralink.com/s/product-documents>.

Regulatory information is available online at <https://support.spectralink.com/s/product-documents>.



Note:

This guide describes all possible menus/submenus/settings in the handset. If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

To see handset unboxing or presentation videos, please visit [this link](#).

Handset Information



Warning:

Ensure that the adapter voltage is the same as the electrical outlet voltage. The handset uses radio signals and does not guarantee a connection in all circumstances. Do not rely on a cordless handset to make emergency calls.



Warning: Magnetic earpiece

The earpiece may retain magnetic objects.



Warning: Hearing loss

Do not hold the handset next to your ear when it is ringing as you can risk serious and permanent damage to your hearing.

Excessive use of earphones and headphones can cause hearing loss.



Caution: Authority to operate this equipment

Changes or modifications to this equipment that are not approved by Spectralink may cause this equipment to fail to comply with part 15 of the FCC rules, voiding the user's authority to operate this equipment.



Caution: Not user serviceable

Spectralink products contain no user-serviceable parts inside. Refer servicing to qualified service personnel.

Never use your handset under the following conditions:

- In the vicinity of electrical detonators
- In shielded rooms
- In areas where radio transmission is forbidden

Do not place a handset near:

- Water, moisture or damp areas
- Heat sources, direct sunlight or unventilated areas
- Devices which generate strong magnetic fields
- Areas where the handset can be covered, its ventilation impaired, liquid spilled on the unit or objects inserted into the handset through any openings
- Areas with temperature extremes

Check for small metal objects in the handset earpiece/mouthpiece before using the handset.

Do not store or locate flammable liquids, gases, or explosive materials in the same compartment or vicinity as the cordless handset, its parts or accessories.

Handset Operational Warnings

Certain operational environments are potentially hazardous. Please read the following text carefully to ensure that you understand the handset's operating conditions.

Potentially Explosive Atmospheres

Do not take your handset into any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.



Warning:

Avoid areas with potentially explosive atmospheres including fueling areas such as lower decks on boats, fuel, or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often marked with signs, but not always.

Battery and Charger Information

Your handset is powered by a removable battery that you will need to fully charge before first using the handset and then recharge periodically. When charging for the first time, make sure you remove the plastic film protecting your battery connectors.

**Caution:** Battery and charger compatibility

Only use batteries and chargers compatible with your handset. For more information, see “**Product Compatibility**” on page 98.

**Caution:** Overheated battery

If an overheated battery is detected, charging will suspend.

- Periodically clean the charge contacts on both the charger and handset.
- Do not leave a battery where it could be subjected to extremely high temperatures.
- Do not charge battery when the ambient room temperature is above 43°C/109°F or below 0°C/32°F.
- Do not replace batteries in potentially explosive environments, such as rooms where flammable liquids or gases are present.
- Do not charge batteries unless you use the approved power adaptor and the proper batteries.
- Use only rechargeable LI-Ion Battery Pack in the Spectralink S35 Handset.
- Do not let battery or power adaptor come into contact with conductive metal objects.
- Power handset off before removing battery.

**Note:** Battery Life

How intensively you use your handset determines how frequently the battery will need to be charged. Under intensive use, battery replacement may be needed during a normal shift.

Certain handset features require more battery capacity than others. Any battery life estimates are highly dependent on phone usage and the features that are deployed as well as the environment itself.

After a length of time, batteries will lose the ability to maintain a charge and to perform at maximum capacity and will need to be replaced. This is normal for all batteries.

Battery Safety Notices



Warning: Risk of explosion and fire

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 55°C, or incinerate. Charging temperature must not exceed 55°C.

THERE IS A RISK OF EXPLOSION OR FIRE IF YOU REPLACE THE BATTERY PACK WITH AN INCORRECT TYPE. USE ONLY SPECTRALINK BATTERY PACK MODEL 5C



Warning: Not suitable for children

The equipment is not suitable for use in locations where children are likely to be present.



Warning: Shock risk

Risk of electric shock. Do not expose charger or battery to liquid, vapor or rain.



Warning: Handle batteries with care

All batteries can cause property damage and/or bodily injury, such as burns, if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

Battery Disposal



Warning: Proper disposal of batteries and recycling

Do not throw away the battery with your domestic waste. Return used batteries to your supplier or servicing agent. The battery must be discarded according to instructions for battery collection for each local area.

The batteries are recyclable. You can help preserve the environment by returning your unwanted batteries to your nearest recycling center for recycling or proper disposal.

Visit <https://support.spectralink.com/> for further guidance on battery recycling.


Replacing Battery




Caution: Battery and charger compatibility

Only use batteries and chargers compatible with your handset. For more information, see “**Product Compatibility**” on page 98.


1. With the battery cover in the Locked position, push it left to unlock it.

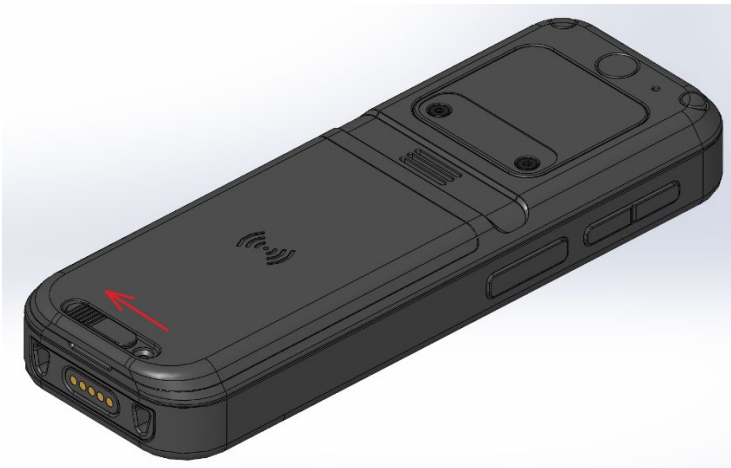

2. Use this recess to separate the battery cover from the handset, using your finger or a coin

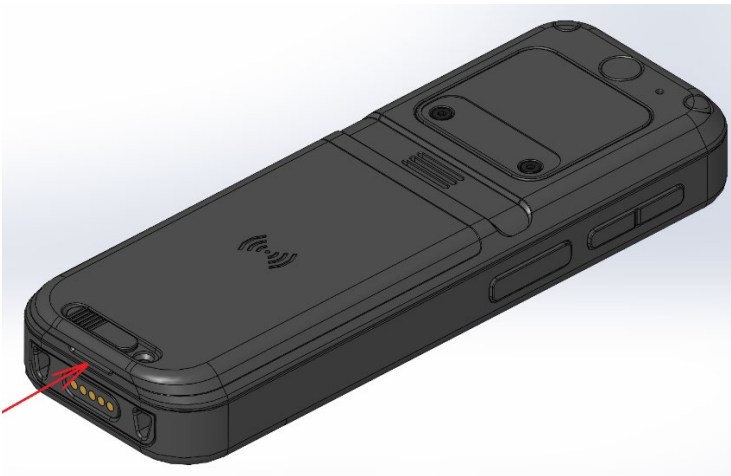

3. Pull the cover up at the latch end

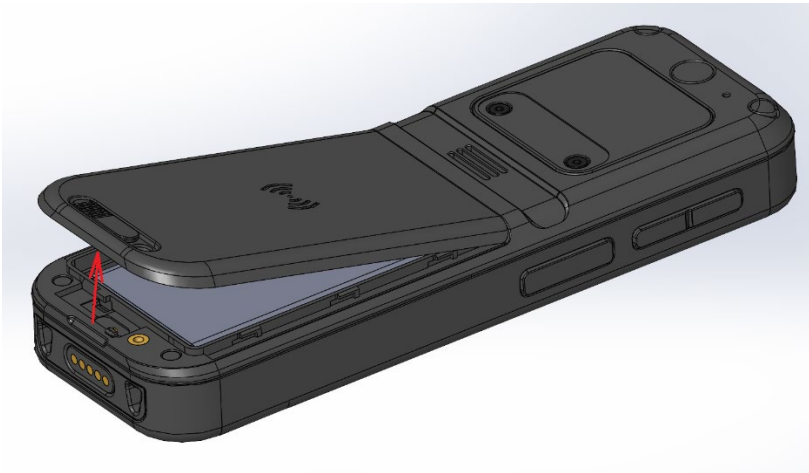

4. Remove the battery cover



You can find the product label, including the CE logo in the battery compartment.

5. Insert the battery with the label readable. First, insert the contact end aligning the contacts of the battery with the corresponding connectors in the battery compartment, then press the battery in place.
6. Insert the back cover in the position shown at Step 3, and firmly push it downwards until it falls in place.

Charger Options

The following types of chargers are available:

- Standard Single Charger



- Dual Charger. The Dual Charger allows charging of a handset (battery within) and a separate battery without the handset at the same time.



- Multi Charger. Allows simultaneous charging for up to 6 handsets.



Charging Battery



Caution: Battery and charger compatibility

Only use batteries and chargers compatible with your handset. For more information, see “**Product Compatibility**” on page 98.

**Caution: Overheated Battery**

If an overheated battery is detected, charging will suspend.

You must fully charge your handset's battery before you use it for the first time in order to maximize the battery's storage capacity and lifespan.

When charging battery for the first time, it is necessary to remove the battery shipping film that covers the battery contacts. The battery is fully charged when the battery indicator becomes solid. For more information see "[Handset Display](#)" on page 21 and "[Status Icons](#)" on page 22.

During normal operation, it takes approximately 4 hours to charge the handset from fully discharged to its full capacity.

**Note:**

The battery drains slowly even while the handset is turned off.

For correct charging, be sure the room temperature is between 0°C/32°F and 43°C/109°F. Do not place the handset in direct sunlight. The battery has a built-in heat sensor which will stop charging if the battery temperature is too high.

If the handset is turned off when charging, the display shows the blue charging icon  in the display center. The charging icon is replaced by the green fully charged icon  when the battery is fully charged. If the handset is turned off when placed in the charger, there will be no reaction to incoming calls.

If the handset is turned on when charging, the display shows varying charging icons, depending on the charge level, starting from very low , to low , then gradually increasing to fully charged ( ->  ->  -> ). The handset will not vibrate. The handset reacts normally for incoming calls.

The Spectralink Handset LED is red when charging and green when fully charged.

It is necessary to recharge the battery when the display shows the battery low icon, or if the handset cannot be turned on. When the battery is completely discharged, the battery must be charged for approximately 4 hours before the handset can be turned on.

Cleaning Your Handset

**Note:**

You must remove the handset from charger and turn it off before cleaning. Do not use liquid cleaners or aerosol cleaners.

Your wireless handset may occasionally need to be cleaned. Generally, wiping the handset's surface with a water-dampened cloth or lightly moist paper towel will remove most films or residues. Commercial off-the-shelf solutions like Lysol® Disinfecting Wipes (or similar), which clearly shows in the ingredients list that it is "bleach-free" may also be used.

If the soiling is too stubborn for plain water, a mild liquid detergent solution may be mixed with water and used. However, be sure to always wipe away any residue with a plain water-dampened cloth.

It is important to note, that it is not allowed to spray directly on the handset. You should only occasionally clean the handset and always use a damp cloth or paper towel.

Turning Handset On/Off

For more information about the handset keys and display, see "**Handset Keys**", on page 17 and "**Handset Display**" on page 21.

To Turn Handset On

- Press  to turn on handset.

To Turn Handset Off

- Press  until the question "**Turn off?**" appears on the display.
- Press  to confirm.

Accessories

The handset can be fitted with a holster and two types of belt clips: a stationary clip, and a swivel clip. The accessories are purchased separately. In order to install the belt clips:


1. Remove the label strip found on the back of the handset.



2. Remove the two screws holding the backplate.



3. Lift off the backplate.

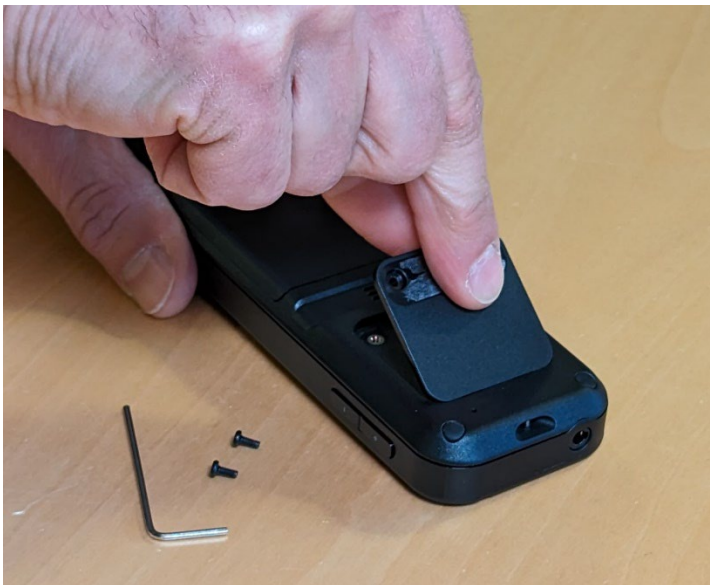

4. With the backplate removed, place the belt clip in its place.



5. Tighten the screws until the belt clip is firmly seated.



Note:

The handset will not fit into the holster with a belt clip attached.

About Your Handset

Handset Keys



- 1 Side Assist Key
- 2 Display
- 3 Volume Control
- 4 LED
- 5 Alarm Key
- 6 Headset Connector
- 7 Left Softkey
- 8 Middle Softkey
- 9 Right Softkey
- 10 Loudspeaker Key
- 11 Mute/Menu Key
- 12 Four Way Navigation Key
- 13 Off Hook Key
- 14 On Hook Key
- 15 Microphone

Handset Characters

Depending on the selected menu language, one of the following character sets is available:

- Latin
- Cyrillic
- Turkish

In standby mode, the following is possible:

- A short press on a key enters the digits 0-9 and the characters * and #.
- If you short press on # you can press it again quickly after to select between .@p+T.

In text mode, the following is possible:

- A short press on * makes upper case letters available. Pressing * again makes lower case letters available.
- The first character entered in a message or when adding/editing a name in e.g. the contact list, will be an upper case character followed by a lower case character (unless making a short press on * before entering the second character).
- If you short press on # you can press it again quickly after to select between the special characters @\$£¥\$<>{ } [\] .

Latin Character Set

Button	Upper case latin character set													
1	?	!	1	-	+	*	/	=	&	(	)	%	¿	ı
2	A	B	C	2	Ä	Å	À	Á	Ã	Æ	Ç			
3	D	E	F	3	È	É	Ê	Ë						
4	G	H	I	4	ì	í	î	ï						
5	J	K	L	5										
6	M	N	O	6	Ñ	Ö	Ó	Ô	Õ	Ø				
7	P	Q	R	S	7	ß								
8	T	U	V	8	Ü	Ù	Ú	Û						
9	W	X	Y	Z	9									
0	space	,	.	0	:	;	_	"	'	~				
*	*													
#	#	@	\$	£	¥	§	<	>	{		}	[	\	]

Button	Lower case latin character set													
1	?	!	1	-	+	*	/	=	&	(	)	%	¿	ı
2	a	b	c	2	ä	å	à	á	ã	æ	ç			
3	d	e	f	3	è	é	ê	ë						
4	g	h	i	4	ì	í	î	ï						
5	j	k	l	5										
6	m	n	o	6	ñ	ô	ó	ô	õ	ø				
7	p	q	r	s	7	ß								
8	t	u	v	8	ü	ù	ú	û						
9	w	x	y	z	9									
0	space	,	.	0	:	;	_	"	'	~				
*	*													
#	#	@	\$	£	¥	§	<	>	{		}	[	\	]

Cyrillic Character Set

Button	Upper cyrillic character set													
1	?	!	1	-	+	*	/	=	&	(	)	%		
2	A	Б	В	Г	2									
3	Д	Е	Ж	З	3									
4	И	Й	К	Л	4									
5	М	Н	О	П	5									
6	Р	С	Т	У	6									
7	Ф	Х	Ц	Ч	7									
8	Ш	Щ	Ъ	Ы	8									
9	Ь	Э	Ю	Я	9									
0	space	,	.	0	:	;	_	"	'	~				
*	*													
#	#	@	\$	£	¥	§	<	>	{		}	[	\	]

Button	Lower cyrillic character set													
1	?	!	1	-	+	*	/	=	&	(	)	%		
2	a	б	в	г	2									

Button	Lower cyrillic character set													
3	д	е	ж	з	3									
4	и	й	к	л	4									
5	м	н	о	п	5									
6	р	с	т	у	6									
7	ф	х	ц	ч	7									
8	ш	щ	ъ	ы	8									
9	ь	э	ю	я	9									
0	space	,	.	0	:	;	_	"	'	~				
*	*													
#	#	@	\$	£	¥	§	<	>	{		}	[	\	]

Turkish Character Set

Button	Upper case turkish character set													
1	?	!	1	-	+	*	/	=	&	(	)	%	ı	İ
2	A	B	C	2	Ä	Å	À	Á	Ã	Æ	Ç			
3	D	E	F	3	È	É	Ê	Ë						
4	G	H	I	4	Ğ	İ	ì	Í	Î	Ï				
5	J	K	L	5										
6	M	N	O	6	Ñ	Ö	Ó	Ô	Õ	Ø				
7	P	Q	R	7	ß	Ş								
8	T	U	V	8	Ü	Ù	Ú	Û						
9	W	X	Y	9										
0	space	,	.	0	:	;	_	"	'	~				
*	*													
#	#	@	\$	£	¥	§	<	>	{		}	[	\	]

Button	Lower case turkish character set													
1	?	!	1	-	+	*	/	=	&	(	)	%	ı	İ
2	a	b	c	2	ä	å	à	á	ã	æ	ç			
3	d	e	f	3	è	é	ê	ë						
4	g	h	i	4	ğ	ı	ì	Í	Î	Ï				

Button	Lower case turkish character set													
5	j	k	l	5										
6	m	n	o	6	ñ	ô	ó	ô	õ	ø				
7	p	q	r	s	7	ß	ş							
8	t	u	v	8	ü	ù	ú	û						
9	w	x	y	z	9									
0	space	,	.	0	:	;	–	"	'	~				
*	*													
#	#	@	\$	£	¥	§	<	>	{		}	[	\	]

Handset Display

Home Screen

The home screen is divided in three parts:

1. Status Bar Information shown:

- On Hook (home screen/idle) – display shows standby text, battery status, signal status  and e.g. presence status (system dependent) and personal settings and time. If Bluetooth activated, the Bluetooth icon is visible . If a wireless headset is connected, the headset icon is visible .

The following icons can also be displayed in the status bar depending on the personal settings:      

For more information, see “**Status Icons**” on page 22.

- Off Hook – display shows call state.

2. Display Center Information shown:

- On Hook (home screen/idle) – display shows standby logo or call information when receiving an incoming call
- Off Hook – display shows a telephone icon. If a wireless headset is connected to the handset, the display shows a telephone icon if the audio is in the handset, and it shows a headset icon if the audio is in the headset.

3. Softkey Text Information shown:

- On Hook (idle) – display shows **Menu** and **Shortcut**
 - Menu: gives access to the different functions of the handset. For more information, see “**List of menu Functions**” on page 47.

- Shortcut: personal shortcuts consist of functions you have chosen to add to a list of shortcuts. For more information, see “**Personal Shortcuts**” on page 43.
- Off Hook – display shows various terms according to the context of the specific function.

Status Icons

The following icons may appear in the Status Bar or Display Center:



Indicates that the handset is out of range or that the system is busy (no speech channels available).



Indicates that the battery capacity is low.



Appears when you miss a call.



Appears when the handset is in alarm state (system dependent). License required.



Appears when an incoming call arrives.



Appears when a private line call arrives (system dependent and only supported by Lync/Skype for Business).



Appears when you make a call.



Appears when the handset is off hook or a call is connected.



Appears when a private line call is connected (system dependent and only supported by Lync/Skype for Business).



Appears when you place a call on hold.





Appears when you receive a message.



Appears when the handset is placed in the charger.



Appears when the battery is charging (when the handset is turned on in the charger)

	Appears when the battery is fully charged (when the handset is turned on in the charger)
	Appears when the battery capacity is decreasing (when the handset is out of the charger).
	Appears when the Absent In Charger feature is enabled and the handset is placed in the charger.
	Notification.
	Appears when executing a device action.
	Appears when a device action is successfully completed.
	Indicates that the keypad or screen is locked.
	Appears when all sounds are disabled.
	Appears when all sounds are enabled.
	Appears when the loudspeaker is turned on.
	Appears when mic mute is turned on.
	Appears when bluetooth is activated. The icon disappears when a wireless headset is connected.
	Appears when a wired headset is connected.
	Appears when Auto Answer is turned on.
	Appears when a voice mail message arrives.
	Appears when there is an unread message in the inbox.



Appears when you can call back to the person who has sent you a message.



Appears in the status bar when all sounds are disabled.



Appears in the status bar when mic mute is turned on.



Appears in the status bar when the keypad or screen is locked.



Appears in the status bar when screen is unlocked.



Appears in the status bar when loudspeaker is turned on.



Appears in the status bar when handset is out of range.



Appears in the status bar when presence status is set to Available (system dependent and only supported by Lync/Skype for Business/MS Teams).



Appears in the status bar when presence status is set to Busy (system dependent and only supported by Lync/Skype for Business/MS Teams).



Appears in the status bar when presence status is set to Do Not Disturb (system dependent and only supported by Lync/Skype for Business/MS Teams).



Appears in the status bar when presence status is set to Be Right Back (system dependent and only supported by Lync/Skype for Business/MS Teams).



Appears in the status bar when presence status is set to Appear Away (system dependent and only supported by Lync/Skype for Business/MS Teams).



Appears in the presence menu to reset status (system dependent and only supported by Lync/Skype for Business/MS Teams).

Voice Mail

If you have a new voice mail message waiting, a blue envelope icon appears in the display. The procedure for retrieving voice mail is system dependent. Contact your system administrator for more information.

Backlight

To save power the backlight can be set to automatically either dim or turn off. This will happen after the handset has been idle for a configurable time delay.

The display backlight automatically turns on again when e.g. an incoming call or message arrives, or if a key is pressed.

The backlight turns off when handset is idle after a preset period of time delay.

The time delay can be adjusted between ten levels. The highest level will result in infinite time delay, and the backlight will never dim or turn off. The other levels will dim with different time delays.

The default delay setting is 5 seconds. The delay can be adjusted between 2 - 15 seconds, with the lowest setting turning the backlight off.



Note:

Turning display backlight off when handset is idle will save battery power.

Setting Backlight to Automatically Dim or Turn Off

When setting display backlight at dimmed, display information can still be seen vaguely when handset is idle. If set to off, backlight turns off.

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Backlight**, and press **✓**.
5. Press **↔** to set backlight to **Dimmed** or **Off**.

Turning Backlight Automatically On

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Backlight**, and press **✓**.
5. Press **↔** to set backlight to **Dimmed**. Backlight is now turned on.

Adjusting Backlight Delay

You can adjust the period of time before backlight turns off or dims when handset is idle.

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.

3. Scroll to **Handset**, and press ✓.
4. Scroll to **Backlight**, and press ✓.
5. Scroll to **Delay**, and press ⇌.
6. Press the **left and right side of the navigation key** to adjust backlight delay.

**Note:**

If adjusting backlight delay to maximum, then the backlight never turns off!

7. Press ✓.

Navigating the Handset

The main part of the functions of the handset are grouped into different menus. In the following sections you will find a description of how to navigate these menus.

You navigate the handset using two softkeys and a four-way navigation key. The following figure illustrates the connection between these keys and the text shown in the display.

Left Softkey

Pressing the left softkey activates the left softkey symbol.

Use the left softkey to enter the main menu. When in the menu, use the key to confirm your choices.

Right Softkey

Pressing the right softkey activates the right softkey symbol.

Use the right softkey to enter a list of personal shortcuts. When inside a menu, use the key to return to the previous menu, or to the home screen.

**Four-Way Navigation Key**

Use the key to move around in menus. The four lines on the key illustrate the directions you move when pressing the key.

You can also select menu items, or change settings using the middle key, like you would with the Left Softkey.

The handset also offers both personal and predefined shortcuts to selected functions in the menu.

Entering Main Menu

- To enter the main menu, press  or the **Middle Button** of the **Four-Way Navigation Key**.

Exiting Main Menu

- To exit the main menu, press .

Scrolling in Menus

- When in the **Menu**, press any of the **Four-Way Navigation** keys to navigate through the menu.

Confirming Choices

- When in the relevant menu, press the **Left Softkey** () or the **Middle Button** of the **Four-Way Navigation Key** to confirm your choices. Various terms are being used in the softkey text according to the context of the specific function.

Navigating Cursor

- When in the relevant menu, press **left or right side of navigation key** to move cursor from side to side. This is especially relevant when you are writing/editing words or entering/editing numbers and want to delete a letter or digit.
- To delete, simply place cursor behind letter or digit, and press **right softkey** to activate **Delete**.

Adjusting Volume

It is possible to adjust the volume for the following:

- Ringing
For more information, see “**Ringling Volume**” on page 74.
- Message alert
For more information, see “**Message Alert Volume**” on page 82.
- In a call/speaker
For more information, see “**Adjusting Speaker Volume**” on page 28.

Returning to Previous Menu

- When in any of the menus, press **right softkey** () to activate **Back**. You now return to the previous menu.

Leaving Menus

- To leave any menu and return to the home screen, press . This key will exit the menu at once.

Hearing Aid Compatibility (HAC)

Your handset has a hearing aid compatibility mode that adjusts the frequency response for users who have hearing aids equipped with telecoil inductive pickups. Acoustic pickup hearing aids will not respond to this adjustment. In a call, the minimum volume is 3 and maximum volume is 8 when HAC is activated.

To View Status of/Enable/Disable HAC

1. Press  to enter the main menu.
2. Scroll to **Settings**, and press .
3. Scroll to **Audio**, and press .
4. Scroll to **HAC**, and select between **On** or **Off**.

Adjusting Speaker Volume

Adjusting speaker volume can only be done when handset is off hook. The handset will remember the speaker volume until you make a new adjustment.

During a telephone conversation, you can adjust the speaker volume at any time in relation to the noise level of the surrounding environment.

Use key placed at the upper left side of handset for volume control.



Note:

You can also turn the speakerphone on to use the handset hands free. For more information, see “**Turning Speakerphone Mute On/Off**” on page 40.

To turn Speaker Volume Up

- While off hook, press **top of volume key** to turn up volume.

To turn Speaker Volume Down

- While off hook, press **bottom of volume key** to turn down volume.

Locking Keypad

You can lock keypad to prevent keys from being accidentally pressed. If using screen lock, then keypad lock is automatically disabled.

To Lock/Unlock Keypad

- Press  followed by * to lock keypad.

- Press  followed by * to unlock keypad.

To answer a call when keypad is locked, press . When you end the call, the keypad automatically locks.

Setting Screen Security

You can set up a PIN (minimum 6 digits, maximum 15 digits) for your handset screen and define the screen to auto lock after a period of time of inactivity, requiring a PIN. This will prevent unauthorized access to your handset.

It is possible to make emergency calls to predefined emergency numbers from the Screen Lock menu or from a locked handset. If the handset is locked, a lock icon  appears in the display. The numbers must be stored in the local phone book before you can define them as emergency numbers. For more information about adding names/numbers to local phone book, see "[Managing Contacts](#)" on page 55.

To Enable/Disable Screen Lock and Setup a PIN

1. Press  to enter the main menu.
2. Scroll to **Settings**, and press .
3. Scroll to **Security**, and press .
4. Scroll to **Screen Lock**, and press .
5. On the **Screen Lock** page, press  to select between **On** or **Off**, then press  to save your selection.
6. If a PIN is set up, confirm by entering the current PIN and press .
7. If no PIN is set up, you will be prompted to enter a new PIN.
8. Enter a PIN between 6 and 15 digits and press .
9. Input the PIN again and press  to save the PIN.



Note:

It is possible to change the PIN or disable the screen lock feature. It is also possible to change the auto screen lock time. The default screen lock time delay is 3 minutes. The auto screen lock time delay can be maximum 5 minutes. If the handset is locked, a lock icon  appears in the display.

**Note:**

The maximum number of allowed attempts to unlock the handset is 250 (default is 3 attempts), but it is possible to define values between 1 and 250 attempts. Information about attempts left, will only be shown when there are 10 attempts or less left before the handset will lock itself.

If pressing an invalid PIN using the maximum defined attempts, then you must reset the handset to factory settings and resubscribe the handset to the system. All information will be lost. Unlocking the factory reset functionality requires a password.

When the handset is locked for further usage, you can still receive calls and make emergency calls, if emergency numbers have been defined.

To Add Emergency Numbers

Ensure that the number to be added as an emergency number exists in the local phone book. For more information about adding names/numbers to the local phone book, see “[Managing Contacts](#)” on page 52.

1. Press to enter the main menu.
2. Scroll to **Settings**, and press .
3. Scroll to **Security**, and press .
4. Scroll to **Screen Lock**, and press .
5. Scroll to **Settings...** and press .
6. Scroll to **Emergency Numbers** and press .
7. Scroll to **Add Number**, and press .
8. Scroll to the contact(s) you want to add as an emergency number and press .

To Find Emergency Numbers

You can scroll through the list of emergency numbers and directly call them from there.

1. Press to enter the main menu.
2. Scroll to **Settings**, and press .
3. Scroll to **Security**, and press .
4. Scroll to **Screen Lock**, and press .
5. Scroll to **Settings...** and press .
6. Scroll to **Emergency Numbers** and press .
7. Scroll to **Find Number**, and press .
8. Scroll to the desired emergency number and press to initiate the call

To Remove Emergency Numbers

1. Press to enter the main menu.

2. Scroll to **Settings**, and press ✓.
3. Scroll to **Security**, and press ✓.
4. Scroll to **Screen Lock**, and press ✓.
5. Scroll to **Settings...** and press ⇌.
6. Scroll to **Emergency Numbers** and press ✓.
7. Scroll to **Remove Number**, and press ✓.
8. Scroll to the desired emergency number and press ✓ to remove it from the emergency number list.

Making Calls

Making Internal/External Calls

**Note:**

The handset must be subscribed and registered to make/answer a call.

For internal calls, dial extension number. Contact your system administrator for a list of these extension numbers.

For external calls, dial external code (or line pool code) to access an external line, then dial external number. Contact your system administrator to confirm what external code or line pool code to use.

Off Hook Dialing (Dial Directly)

1. Press .
2. Dial number.
3. Press  to end the call.

On Hook Dialing (Dial Directly)

1. Dial number.
2. Press .
3. Press  to end the call.

Dial from Contacts (Local)

The **Find Name** function of the handset's contact list makes it easy for you to find a contact.

10. Press  to enter the main menu.
11. Scroll to **Contacts**, and press .
12. Scroll to **Local Contacts**, and press .
13. Scroll to **Find name**, and press .
14. To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.

15. Press .

16. If more than one number: scroll to the desired number and press .

17. The green display call icon appears until call is connected.

18. Press  to end the call.



Timesaver:

Alternatively, press the **bottom of the navigation key** to access the contact list. Scroll to the desired name or number, and press .

Dial from Call List

Call list shows up to 40 of your latest incoming, outgoing and missed calls (system dependent feature). When the call list memory is full, the handset automatically erases the oldest call when a new call is received in call list.

- Incoming calls are illustrated with green arrows .
- Outgoing calls are illustrated with blue arrows .
- Missed calls are illustrated with red arrows .

Dial from Call List

1. While on hook, press **left side of navigation key** to enter call list.
2. Scroll to the desired name or number, and press .

Dial from Missed Call List

1. While on hook, press **right side of navigation key** to enter missed call list.
2. Scroll to the desired name or number, and press .

Dial from Call History

Call history shows up to 40 of your latest incoming, outgoing and missed calls (system dependent feature). When the call history memory is full, the handset automatically erases the oldest call when a new call is received in call list.

Dial from Call List

1. Press  to enter the main menu.
2. Scroll to **Calls**, and press .
3. Scroll to the desired list (Incoming/Outgoing/Missed Calls), and press .
4. Scroll to the desired name or number, and press .

Redial

1. Press  to enter the main menu.
2. Scroll to **Calls**, and press .
3. Scroll to **Outgoing Calls**, and press .
4. Scroll to the desired name or number, and press .



Timesaver:

Alternatively, press the **left side of the navigation key** to enter the call list. Scroll to the desired name or number, and press .

Speed Dial

If you have assigned a number to one of the speed-dialing keys 0-9, do the following:

- Press and hold a key (0-9) for three seconds, until the call is initiated.

Initiating Ad-hoc Conference Call

Ad-hoc Conference call is a system dependent feature and only supported by Cisco Unified Communications Manager. Contact your system administrator for more information.

To Initiate an Ad-hoc Conference Call

1. Dial number.
2. Press .
3. Press , scroll to **New call**, and press .
4. Dial a new number. The first call is automatically put on hold while dialing the second number.
5. Press .
6. When the second call is connected, press , and then press **Join in conference**.
7. Press  to end the call.

**Note:**

The maximum number of participants in an ad-hoc conference is system dependent. Repeat step 3-6 to add more numbers. Only the initiator of the conference can add numbers into the conference.

It depends on the PBX settings whether the conference call remains between the other participants in case you (the initiator) have to leave the conference call. Contact your system administrator for more information.

Central Contacts (System Dependent)

**Note:**

To support the Central Contacts feature, the Spectralink IP-DECT Server must have firmware version PCS 17C or newer. Contact your system administrator for more information.

You can enter a company contact list and search by selected column in server (e.g. **Name**). The company contact list is a common contact list for all handsets subscribed to the actual system. Names and numbers can be added to the company contact list by the system administrator.

When searching the company contact list, the T9 (Text on 9 keys) search method or Multi-tap (abc) search method is used. It is possible to search for letters as well as numbers. Long press **#** to change between the two possible search methods T9 (Text on 9 keys) or Multi-tap (abc). You can only change the search method prior to searching.

1. While on hook, press **top of the navigation key** to enter the company contact list. Either **T9** (default) or **abc** is displayed in the status bar.
If you want to change between the two possible search methods, long press **#**.
2. Scroll to the desired name or search for the name or number, and press **✓**.
If searching, you can see which search string the match was made on, in the status bar.
If entering a wrong key, press **✕** to delete it. Long pressing **✕** will delete the entire search string.
3. When the desired name is selected, scroll to either telephone number or mobile number and press **📞** to dial the number.



Tip:

After ending the call, it is possible to add the number to your local contact list:

- With the call ended, press the **left side of the navigation key** to enter the call list
- Press  to enter the **Call Details** menu.
- Press  again to enter the **Options** menu. The option **Add to contact list** is automatically selected.
- Press  and add a name for your contact.
- Press  to save the number to your local contact list.

Answering Calls

Answering/Ending a Call



Note:

The handset must be subscribed and registered to make/answer a call.

When the handset rings, the display will show the icon for incoming calls and the caller information will appear below if supported by the subscribed system (only the caller's number will appear if the screen is locked). Call Answered Elsewhere is also supported and the notification is shown in the display, when the call is answered elsewhere.

- To answer a call, press 
- To end a call, press 



Caution:

Do not hold the handset next to your ear when it is ringing as you can risk serious and permanent damage to your hearing.



Note:

You can distinguish between an internal and external call by the ring tone. This is a system dependent feature.

Auto Answer

When auto answer is turned on, the handset automatically goes off hook when an incoming call arrives.

If subscribed to a Spectralink wireless solution, the handset automatically goes on hook when calls are ended.

To Turn Auto Answer On/Off

1. Press  to enter main menu.
2. Scroll to **Settings**, and press .
3. Scroll to **Call options**, and press .
4. Scroll to **Auto answer**, and press .
5. Press  to select between **On** or **Off**.

For more information about auto answer settings, see “**Auto Answer**” on page 87.

Muting a Call

- When the handset rings, press  to mute the ring signal.

Rejecting a Call

Rejecting a call is system dependent. If supported by the subscribed system, do the following:

- When the handset rings, press  to refuse the call. The rejected call is registered as a missed call.

During Calls

Call Transfer

Call Transfer is a system dependent feature.

Call Transfer (Blind)

1. While on a call, press .
2. Select **New call**, and then dial the extension or external number.
3. Press  to send the call through.

Call Transfer (Attended)

1. While on a call, press .
2. Select **New call**, and then dial the extension or external number.
3. Press  to call the extension.
4. After the other caller answers, press  to send the call through and to hang up.

Call Hold

Call Hold is a system dependent feature. When an active call is on hold, the grey Hold icon



is shown in the display.

If handset is subscribed to a SIP IPBX, you can also do the following:

1. To place an active call on hold, press , scroll to **Hold** and press .
2. To retrieve the call, press .

Call Waiting

Call Waiting is a system dependent feature.

Call Waiting

- While on a call, press  to answer a second incoming call. The first call is automatically put on hold.
- To reject a second incoming call, press .
- To disconnect the active call and return to the waiting call, press .
- To end both calls, press  twice.

- To swap between two calls, press the **Right softkey** and select **Swap calls**.

Call Forward Unconditional (CFU)

Call forward unconditional (CFU) is a system dependent feature.



Note:

The feature code for CFU is ***21*\$#**. It is possible to change the code ***21*** on the Spectralink IP-DECT Server to fit your standard. For more information, see the relevant documentation available at <https://support.spectralink.com/>

To Enable CFU

1. To enable CFU press ***21*** followed by the desired number/extension and **#**, then press . Confirmation in display and a tone indicates that the feature has been activated.
2. Press key to hang up. The status bar shows that CFU is activated.

To Disable CFU

1. To disable CFU, press **#21#**, then press .
2. Press to hang up. Confirmation in display and a tone indicates that the feature has been deactivated.

Turning Speakerphone Mute On/Off

Turning speakerphone on allows other people in the room to listen to and participate in the conversation. You may set the handset on a desk and leave your hands free.

To Turn Speakerphone On/Off

1. While in a call, press to enable the speakerphone.
2. To disable speakerphone, simply press again.
3. Alternatively, pressing the **left side of the navigation key** during a call can enable or disable the speakerphone.

Turning Microphone Mute On/Off

You can mute the microphone so that you can hear the other party, but they cannot hear you.

To Turn Microphone On/Off

1. While on a call, press  to turn microphone mute on.
2. To turn microphone mute off, press .

Enter Contacts (Local)

- While on a call, you can access the find name function to scroll through names and numbers by pressing the **bottom of the navigation key**.

For more information, see "[Managing Contacts](#)" on page 52.

Enter Contacts (Company)

- While on a call, you can access the find name function to scroll through names and numbers by pressing the **top of the navigation key**.

For more information, see "[Central Contacts \(System Dependent\)](#)" on page 35.

Using Shortcuts

Types of Shortcuts

The handset contains two types of shortcuts:

- **Personal Shortcuts**
- **Predefined Shortcuts**

Predefined Shortcuts



Note:

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

Predefined shortcuts are unchangeable and assigned to different keys.

In the following, you can find a list of predefined shortcuts and a description of how to access and use them:

- **Call list** (system dependent feature): While on hook, press **left side of navigation key** to enter the call list:
 - Incoming calls are illustrated with green arrows .
 - Outgoing calls are illustrated with blue arrows .
 - Missed calls are illustrated with red arrows .
- **Exit menu:** When inside any menu, press  to exit to the home screen.
- **Find name (local contact list):** While on or off hook, press the **bottom of the navigation key** to enter the name list
- **Company Contacts:** While on hook, press the **top of the navigation key** to enter the company contact list. Either **T9** (default) or **abc** is displayed in the status bar. Long press **#** to change between the two possible search methods T9 (Text on 9 keys) or Multi-tap (abc). You can only change the search method prior to searching. For more information, see **Central Contacts (System Dependent)** on page 35.
- **Keypad locked/unlocked:** While on hook, press the **Menu key** followed by * (Display will show the key lock icon .
- **Missed calls:** While on hook, press **right side of navigation key** to enter a list of missed call.
- **Silent on/off:** Press , followed by the **#** button to turn the handset silent mode on/off. In silent mode there is no sound for incoming calls and notifications. (Display

shows the silent icon followed by the text **Silent mode on/of**, and a small icon is placed in status line: 📴)

- **Speed dial:** While on hook, press and hold digit equivalent to number of the contact in the speed dial list until call is started.
- **Send MSF** (system dependent): While on hook, long press and hold digit equivalent to the desired MSF function.

Personal Shortcuts



Note:

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

Personal shortcuts consist of functions you have chosen to add to a list of shortcuts. The list is assigned to the right softkey. Personal shortcuts give you easy access to the functions you use most often. You can only use personal shortcuts when the handset is in standby mode (on hook).

The following functions can be added as personal shortcuts:

- Add name/number
- Auto answer
- Auto key lock
- Backlight
- Headset
- Inbox
- Write message
- Templates
- Ring tone
- Silent mode
- Info
- Vibrate
- Task list
- Noisy environment
- Contacts (Local Contacts)
- External Services

- Sign in/out – e.g. used for signing in to Lync/Skype for Business (system dependent) and/or handset sharing (license required)

To Add a Shortcut

1. While on hook, press ★ to enter the shortcut function.
2. Scroll to **Add shortcuts**, and press ✓.
3. Scroll to the function you want to make a shortcut to.
4. Press ✓ to add the function to the list of personal shortcuts.

To Use a Shortcut

1. While on hook, press ★ to enter the shortcut function.
2. Scroll to the desired shortcut and press ✓.

To Remove a Shortcut

1. While on hook, press ★ to enter the shortcut function.
2. Scroll to **Add shortcuts**, and press ✓.
3. Scroll to the desired shortcut, press ✓ to remove the function from the list of shortcuts.

Side Key Shortcuts

The side key, found on the left side of the handset, can also be programmed to access personal shortcuts, on a short press, double press or long press.

To Program the Side Key With a Shortcut

1. Press ≡ to enter the main menu.
2. Scroll to **Settings**, and press ✓.
3. Scroll to **Handset**, and press ✓.
4. Scroll to **Side Key**, and press ✓.
5. Select **Short press**, **Double press** or **Long press** and press ✓.
6. Scroll to the desired shortcut and press ✓.

Using the Menu

Description of Menus



Note:

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

The handset offers a range of functions that are grouped into menus. The main menu consists of the following menus: Contacts, Calls, Audio, Settings, Profile, Messages and Shortcuts.



Note:

If the handset is in menu mode, and an incoming call arrives, then the menu will be dropped and the call will be handled as usual. When the call is terminated, the handset returns to menu mode.

In the following, you will find a short description of the menus.

Contacts

You can store directory numbers/SIP extensions and names in your local contact list.



Note:

Besides your local contact list that can be reached and managed from the main menu, there is also a central contacts list pointing to a corporate directory list (common contact list) containing numbers to call. For more information, see **Central Contacts (System Dependent)**" on page 35.

To support the company contact list feature, the Spectralink IP-DECT Server must have firmware version PCS 17C or newer. Contact your system administrator for more information.

The contact list can store up to 350 names with up to four numbers each (up to 4 directory numbers or a combination of directory numbers and SIP URIs. The maximum number of SIP URIs are 2. Maximum directory numbers are 4. The total number of numbers stored must not exceed 4 though. E.g. 4 directory numbers and 0 SIP URIs or 3 directory numbers and 1 SIP URI or 1 directory number and 2 SIP URIs). The maximum length of a directory number allowed is 24 digits. The maximum length of a SIP URI allowed is 64 characters. Names are sorted alphabetically starting with their first character.

For more information, see "[Managing Contacts](#)" on page 52.

Calls

The Calls menu keeps track of all your recent calls. It can store a total of 40 incoming, outgoing or missed calls.

For more information, see "[Calls](#)" on page 59.

Audio

The Audio menu contains all the options related to adjusting the sound output of your handset, in addition to other call quality related settings.

For more information, see "[Audio](#)" on page 74.

Settings

Settings offer you the opportunity to customize the handset according to your needs. The settings can be changed at any time.

For more information, see "[Settings](#)" on page 82.

Profile

The Profile menu lets you choose between three handset profiles: Default, Vibrate Only or Silent

For more information, see "[Profile](#)" on page 75.

Messages

Messaging is a system dependent feature.

If supported by the subscribed system, you can send and receive messages from the Messages menu. You write messages using the alphanumeric keyboard.

All messages are automatically stored in inbox or outbox.

The inbox is a list of all received messages, while the outbox is a list of all sent messages. Both lists are sorted by time and date, starting with the most recent.

If the name and number of a message already exist as a contact in your contact list, the message in the inbox or outbox will display the name of the sender or recipient. If the name and number do not exist in your contact list, the message will display the number of the sender or recipient.

Inbox and outbox can store up to 20 messages in total. A maximum of 180 letters, including spaces, is allowed for each message.

**Note:**

If the memory of the inbox or outbox is full, the handset will automatically erase the oldest message when a new one needs to be stored.

Depending on the setting in the Message List Content, messages display an excerpt of the text.

Shortcuts

The Shortcuts menu enables you to add personal or predefined shortcuts. Personal shortcuts consist of functions you have chosen to add to a list of shortcuts. The list is assigned to the right softkey. Personal shortcuts give you easy access to the functions you use most often. You can only use personal shortcuts when the handset is in standby mode (on hook).

For more information, see "**Personal Shortcuts**" on page 43.

List of Menu Functions

**Note:**

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

In the following, you will find a list of the different menu functions. The list gives a quick overview of where to find the desired function of the handset.

Contacts

1. Central Contacts
2. Local Contacts
 - Find name
 - Add name/number
 - Delete
 - Name and number
 - Delete All
3. Speed Dial
4. Settings
 - Delete speed dial

- Long key press
 - Settings

Calls

1. Incoming calls
2. Outgoing calls
3. Missed calls
4. Delete
 - Incoming calls
 - Outgoing calls
 - Missed calls
 - All
5. Call Options
 - Long key press
 - Settings

Audio

1. Silent
 - Settings
2. Ring tone
3. Ring volume
4. Audio environment
5. Bluetooth headset
6. Settings
 - Country dial tones
 - Out of range
 - Settings

Settings

1. About
2. Audio
 - Country dial tones
 - Out of range
 - Settings
3. Call options
 - Auto answer
 - Settings

4. Handset

- Time & date
 - Time Format
 - Date Format
 - Change Time
 - Change Date
- Languages
- Backlight
 - Delay...
- Side key
- Long key
 - Settings
- Region

5. Messaging

- Alarms
- Rolling tasks
- Templates
- Long key press
 - Settings
- Message list content
- Alert volume
- MSF tones in a call
- MSF function

6. Security

- DECT Security
- Screen Lock

7. System

- Subscription
 - Search new system
 - Manually add system
 - Select system
 - Delete system
- Signal strength

Profile

1. Default

2. Vibrate only
3. Silent
4. Presence (requires MS Teams license)

Messages

1. Task list
2. New message
3. Inbox
4. Sent messages
5. Erase messages
 - All Read Messages
 - Inbox...
 - Outbox...
 - All...
6. Settings
 - Alarms
 - Rolling tasks
 - Templates
 - Long key press
 - Settings
 - Message list content
 - Alert volume
 - MSF tones in a call
 - MSF function

Shortcuts

1. Add shortcuts

Microsoft Teams (license required)

1. VM
2. CFW
3. DND
4. Sign out / Sign in
5. Re-onboard

Contacts



Note:

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them if a change is needed.

You can store directory numbers/SIP extensions and names in your local contact list.



Note:

Besides your local contact list that can be reached and managed from the main menu, there is also a central contacts list pointing to a corporate directory list (common contact list) containing numbers to call. For more information, see [Central Contacts \(System Dependent\)](#)" on page 35.

To support the company contact list feature, the Spectralink IP-DECT Server must have firmware version PCS 17C or newer. Contact your system administrator for more information.

The contact list can store up to 350 names with up to four numbers each (up to 4 directory numbers or a combination of directory numbers and SIP URIs. The maximum number of SIP URIs are 2. Maximum directory numbers are 4. The total number of numbers stored must not exceed 4 though. E.g. 4 directory numbers and 0 SIP URIs or 3 directory numbers and 1 SIP URI or 1 directory number and 2 SIP URIs). The maximum length of a directory number allowed is 24 digits. The maximum length of a SIP URI allowed is 64 characters. Names are sorted alphabetically starting with their first character

Using Alphanumeric Keyboard

The normal dialing keys (0-9) are used for writing the name to be placed in the contact list. By pressing the keys a certain number of times, the related letters will appear in the display.

- Spaces are made by using the 0-key.
- Key * changes between uppercase and lowercase letters, which is indicated on the top left-hand corner of the display.
- Pressing left or right side of navigation key will move the cursor.
- To delete letters, place cursor behind letter and press .

Managing Contacts

The Contacts menu offers a range of possibilities to manage existing contacts and makes it easy to add, edit or delete name and directory number/SIP extension. It is possible to add up to four numbers to a contact (up to 4 directory numbers or a combination of directory numbers and SIP URIs. The maximum number of SIP URIs are 2. Maximum directory numbers are 4. The total number of numbers stored must not exceed 4 though. E.g. 4 directory numbers and 0 SIP URIs or 3 directory numbers and 1 SIP URI or 1 directory number and 2 SIP URIs):

Finding a Contact in Contacts

1. Press **≡** to enter the main menu.
2. Scroll to **Contacts**, and press **✓**.
3. Scroll to **Local Contacts**, and press **✓**.
4. Scroll to **Find name**, and press **✓**.
5. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
 - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.



Timesaver:

While on or off hook, press the **bottom of the navigation key** to enter the name list.

Adding a New Contact to Contacts

Use the Add name/number function when you want to add a new contact to the contact list.

9. Press **≡** to enter the main menu.
10. Scroll to **Contacts**, and press **✓**.
11. Scroll to **Local Contacts**, and press **✓**.
12. Scroll to **Add name/number**, and press **✓**.
13. Type the name of the contact using the keys 0-9.
14. Scroll to number, and enter the directory number/SIP extension of the contact (max. 24 digits/64 characters). Before entering a SIP URI, press and hold **#** until **SIP:** is shown.
15. Press **↓** to store the name and directory number/SIP extension.

If the display shows **Memory full**, it is necessary to delete one or more contacts from the contact list.



Tip:

If you have just dialed a directory number/SIP extension from the company contact list, this directory number/SIP extension can be easily added to your local contact list:

- After ending the call, press the **left side of the navigation key** to enter the call list.
- Press **⋮** to enter the **Call Details** menu.
- Press **⋮** again. The option **Add to contacts** is automatically selected.
- Press **✓** and type the name/number of the new contact.
- Press **↵** to store name and directory number/SIP extension.

For more information about making calls from the company contact list, **Central Contacts (System Dependent)**" on page 35.

Editing Name/Number

You can edit name and directory number/SIP extension of a contact in the contact list at any time.

1. Press **≡** to enter the main menu.
2. Scroll to **Contacts**, and press **✓**.
3. Scroll to **Local Contacts**, and press **✓**.
4. Scroll to **Find name**, and press **✓**.
5. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
 - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.
6. Press **⋮** on the desired contact.
7. If more than one directory number/SIP extension: scroll to the desired directory number/SIP extension, and press **✓**.
8. Scroll to **Edit name/number**, and press **✓**.
9. Edit **Name** using the keys 0-9.
10. Scroll to **Number**, and edit directory number/SIP extension using the keys 0-9. Before entering a SIP URI, press and hold **#** until **SIP:** is shown.

11. Press  to store your changes.

Adding New Number

You can add a new directory number/SIP extension to a contact in the contact list at any time.

1. Press  to enter the main menu.
2. Scroll to **Contacts**, and press .
3. Scroll to **Local Contacts**, and press .
4. Scroll to **Find name**, and press .
5. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
 - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.
6. Press  on the desired contact.
7. If more than one number, scroll to any number and press .
8. Scroll to **Add new number**, and press .
9. Enter the new directory number/SIP extension using the keys 0-9 (max. 24 digits/64 characters), and press **Save**. Before entering a SIP URI, press and hold **#** until **SIP:** is shown.
10. Repeat step 7- 8 to add another directory number/SIP extension to the contact.

Adding Number to Speed Dial.

You can assign a number to one of the speed-dialing keys 0-9. This way you only need to press a single digit to find the name and number of the contact, you want to call. You can assign up to 10 speed dial numbers.

1. Press  to enter the main menu.
2. Scroll to **Contacts**, and press .
3. Scroll to **Local Contacts**, and press .
4. Scroll to **Find name**, and press .
5. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.

- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.
6. Press  on the desired contact.
 7. If more than one number, scroll to the desired number and press .
 8. Scroll to **Add to speed dial**, and press .
 9. Scroll to the desired position, and press .
 10. If position is occupied, press  to replace existing speed dial.

Deleting Number

You can delete a single directory number/SIP extension at any time and still keep the rest of the belonging directory numbers/SIP extensions of a contact.

1. Press  to enter the main menu.
2. Scroll to **Contacts**, and press .
3. Scroll to **Local Contacts**, and press .
4. Scroll to **Find name**, and press .
5. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
 - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.
6. Press  on the desired contact.
7. If more than one directory number/SIP extension: scroll to the desired directory number/SIP extension, and press .
8. Scroll to **Delete number**, and press .
9. Press  to confirm.

Deleting Contact

Use the delete name and number function if you want to delete a contact and all the belonging directory numbers/SIP extensions.

1. Press  to enter the main menu.
2. Scroll to **Contacts**, and press .
3. Scroll to **Local Contacts**, and press .
4. Scroll to **Delete**, and press .
5. Scroll to **Name & Number**, and press .

6. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
 - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.
7. Press ✓ to select the contact.
8. Press ✓ confirm and delete the contact.

OR

1. Press ≡ to enter the main menu.
2. Scroll to **Contacts**, and press ✓.
3. Scroll to **Local Contacts**, and press ✓.
4. Scroll to **Find name**, and press ✓.
5. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
 - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.
6. Press ⋮ on the desired contact.
7. If more than one directory number/SIP extension, scroll to the desired directory number/SIP extension, and press ✓.
8. Scroll to **Delete name/number**, and press ✓.
9. Press ✓ to confirm.

Deleting All Speed Dial Numbers and Contacts

Use the delete all function if you want to delete all contacts and speed dial numbers.

1. Press ≡ to enter the main menu.
2. Scroll to **Contacts**, and press ✓.
3. Scroll to **Local Contacts**, and press ✓.
4. Scroll to **Delete**, and press ✓.
5. Scroll to **Delete all**, and press ✓.
6. Enter password **0000**, and press ✓.

All contacts and speed dial numbers will be deleted.

Speed Dial

Speed Dial Calls

Press and hold a key (0-9) for three seconds, until the call is initiated. You can set the keys 0-9 to long press **Speed dial** or **Send MSF**. For more information, see “[Using Long Key](#)” on page 86.

Adding a Number to Speed Dial

You can assign a number to one of the speed-dialing keys 0-9. This way you only need to press a single digit to find the name and number of the contact, you want to call. You can assign up to 10 speed dial numbers.

1. Press  to enter the main menu.
2. Scroll to **Contacts**, and press .
3. Scroll to **Speed dial**, and press .
4. Scroll to the desired speed dial and press .
5. Scroll to desired number, and press .

Deleting a Speed Dial Number

Use this function to delete a speed dial number.

1. Press  to enter the main menu.
2. Scroll to **Contacts**, and press .
3. Scroll to **Settings**, and press .
4. Scroll to **Delete**, and press .
5. Scroll to **Delete Speed Dial**, and press .
6. Scroll to the desired speed dial number, and press .

Deleting All Speed Dial Numbers and Contacts

Use the delete all function if you want to delete all contacts and speed dial numbers.

1. Press  to enter the main menu.
2. Scroll to **Contacts**, and press .
3. Scroll to **Local Contacts**, and press .

4. Scroll to **Delete**, and press ✓.
5. Scroll to **Delete all**, and press ✓.
6. Enter password **0000**, and press ✓.

All contacts and speed dial numbers will be deleted.

Call History



Note:

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

The Call history menu can store a total of 40 incoming, outgoing and missed calls. Call history is divided into lists of: incoming calls, outgoing calls and missed calls.

If the memory of call history is full, the handset will automatically erase the oldest call when a new call is received in call history.

Incoming Calls

Incoming call is a list of all your incoming calls sorted by date and time of the call, starting with the latest call.

If name and directory number/SIP extension of incoming call already exist in your contact list, the incoming call will be represented with the name of the contact. If name and directory number/SIP extension do not exist in your contact list, the handset cannot recognize the directory number/SIP extension and the incoming call will only be represented by the calling number.

In both cases, incoming call history provides details about incoming calls, such as time, date and length of conversation.

It is possible to add name and directory number/SIP extension of an incoming call to the contact list or to delete an incoming call from the list.

Viewing List of Incoming Calls

1. Press to enter main menu.
2. Scroll to **Calls**, and press .
3. Scroll to **Incoming Calls**, press .
4. To call a directory number/SIP extension from the list, scroll to the desired directory number/SIP extension, and press .

Adding an Incoming Call to Contacts

If you have an incoming call and the directory number/SIP extension is not in the contact list, it is possible to add it to the contact list from the incoming call list.

1. Press to enter main menu.

2. Scroll to **Calls**, and press ✓.
3. Scroll to **Incoming Calls**, press ✓.
4. Scroll to the desired call, and press ⋮ to enter the call details.
5. Press ⋮ again to enter the **Options** menu.
6. Scroll to **Add to Contacts**, and press ✓.
7. Write the name of the contact using the keys 0-9, and then press ✓ to save the contact.

Deleting an Incoming Call from List

1. Press ≡ to enter main menu.
2. Scroll to **Calls**, and press ✓.
3. Scroll to **Incoming Calls**, press ✓.
4. Scroll to the desired call, and press ⋮ to enter the call details.
5. Press ⋮ again to enter the **Options** menu.
6. Scroll to **Delete from list**, and press ✓.
7. Press ✓ to confirm.



Timesaver:

Alternatively, while on hook, press the **left side of the navigation key** to enter call list. To call a directory number/SIP extension from the list, scroll to the desired directory number/SIP extension, and press ⋮ to enter the call details. By accessing the **Details** menu and then the **Options** menu, it is possible to add a directory number/SIP extension to the contact list or to delete a directory number/SIP extension from the list.

Outgoing Calls

Outgoing calls is a list of all your outgoing calls sorted by date and time of the call, starting with the latest call.

If name and directory number/SIP extension of the outgoing call already exist in your contact list, the outgoing call will be represented with the name of the contact. If name and directory number/SIP extension do not exist in your contact list, the outgoing call is only represented by the calling number.

In both cases, outgoing call history provides details about outgoing calls, such as time, date and length of conversation.

It is possible to add name and directory number/SIP extension of an outgoing call to your contact list, or to delete an outgoing call from the list.

Viewing List of Outgoing Calls

1. Press  to enter main menu.
2. Scroll to **Calls**, and press .
3. Scroll to **Outgoing Calls**, press .
4. To call a directory number/SIP extension from the list, scroll to the desired directory number/SIP extension, and press .

Adding an Outgoing Call to Contacts

If you have made a call and the directory number/SIP extension is not in the contact list, it is possible to add it to the contact list from the outgoing call list.

1. Press  to enter main menu.
2. Scroll to **Calls**, and press .
3. Scroll to **Outgoing Calls**, press .
4. Scroll to the desired call, and press  to enter the call details.
5. Press  again to enter the **Options** menu.
6. Scroll to **Add to Contacts**, and press .
7. Write the name of the contact using the keys 0-9, and then press  to save the contact.

Deleting an Outgoing Call from List

1. Press  to enter main menu.
2. Scroll to **Calls**, and press .
3. Scroll to **Outgoing Calls**, press .
4. Scroll to the desired call, and press  to enter the call details.
5. Press  again to enter the **Options** menu.
6. Scroll to **Delete from list**, and press .

7. Press ✓ to confirm.



Timesaver:

Alternatively, while on hook, press the **left side of the navigation key** to enter call list. To call a directory number/SIP extension from the list, scroll to the desired directory number/SIP extension, and press **⋮** to enter the call details. By accessing the **Details** menu and then the **Options** menu, it is possible to add a directory number/SIP extension to the contact list or to delete a directory number/SIP extension from the list.

Missed Calls

Missed calls is a list of all your missed calls sorted by date and time of the call, starting with the latest call.

If the name and directory number/SIP extension of the missed call already exist in your contact list, the missed call is represented with the name of the contact. If the name and directory number/SIP extension do not exist in your contact list, the missed call is only represented by the calling number.

In both cases, missed call history provides details about missed calls, such as time and date.

It is possible to add name and directory number/SIP extension of a missed call to your contact list or to delete a missed call from the list.

Viewing List of Missing Calls

1. Press **≡** to enter main menu.
2. Scroll to **Calls**, and press ✓.
3. Scroll to **Missed Calls**, press ✓.
4. To call a directory number/SIP extension from the list, scroll to the desired directory number/SIP extension, and press **☎**.



Timesaver:

Alternatively, while on hook, press the **right side of the navigation key** to enter the missed call list. To call a directory number/SIP extension from the list, scroll to the desired directory number/SIP extension, and press **☎**. By accessing the **Details** menu and then the **Options** menu, it is possible to add a directory number/SIP extension to the contact list or to delete a directory number/SIP extension from the list.

Adding a Missed Call to Contacts

If you have missed a call and the directory number/SIP extension is not in the contact list, it is possible to add it to the contact list from the missed call list.

1. Press **≡** to enter main menu.
2. Scroll to **Calls**, and press **✓**.
3. Scroll to **Missed Calls**, press **✓**.
4. Scroll to the desired call, and press **⋮** to enter the call details.
5. Press **⋮** again to enter the **Options** menu.
6. Scroll to **Add to Contacts**, and press **✓**.
7. Write the name of the contact using the keys 0-9, and then press **✓** to save the contact.

Deleting a Missed Call from the List

1. Press **≡** to enter main menu.
2. Scroll to **Calls**, and press **✓**.
3. Scroll to **Missed Calls**, press **✓**.
4. Scroll to the desired call, and press **⋮** to enter the call details.
5. Press **⋮** again to enter the **Options** menu.
6. Scroll to **Delete from list**, and press **✓**.
7. Press **✓** to confirm.

Delete Call History

The call history menu can store a total of 40 incoming, outgoing and missed calls. If the memory of call history is full, the handset automatically erases the oldest call when a new call needs to be stored in the call history.

Use the following delete functions to empty the lists in the call history manually.

Deleting All Entries in the Call History List

1. Press **≡** to enter main menu.
2. Scroll to **Calls**, and press **✓**.

3. Scroll to **Delete**, and press ✓.
4. Scroll to the **incoming, outgoing** or **missed call** list, and then press ✓.
5. Press ✓ again to confirm and empty the call list.

Deleting Call History

1. Press ☰ to enter main menu.
2. Scroll to **Calls**, and press ✓.
3. Scroll to **Delete**, and press ✓.
4. Scroll to **All calls**, and press ✓.
5. Press ✓ again to confirm and empty all lists.

Messages



Note:

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

Messaging is a system dependent feature.

If supported by the subscribed system, you can send and receive messages from the Messages menu. You write messages using the alphanumeric keyboard.

All messages are automatically stored in inbox or outbox.

The inbox is a list of all received messages, while the outbox is a list of all sent messages. Both lists are sorted by time and date, starting with the most recent.

If the name and number of a message already exist as a contact in your contact list, the message in the inbox or outbox will display the name of the sender or recipient. If the name and number do not exist in your contact list, the message will display the number of the sender or recipient.

Inbox and outbox can store up to 20 messages in total. A maximum of 180 letters, including spaces, is allowed for each message.



Note:

If the memory of the inbox and sent messages are full, the handset will automatically erase the oldest message when a new message needs to be stored.

Depending on the setting in the Message List Content, messages display an excerpt of the text.

Writing, Sending and Saving Messages

Writing and Sending a New Message

1. Press **≡** to enter the main menu.
2. Scroll to **Messages**, and press **✓**.
3. Scroll to **New message**, and press **✓**.
4. Write a message. Optionally, you can use a template:
 - Press **⋮**, scroll to **Use template**, press **✓**.
 - Scroll to desired template, press **⋮**, scroll to **Select** and press **✓**.

5. Press , scroll to **Send**, and then press .
6. Enter the recipient's number or press  to find the recipient's number.
7. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
 - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.
8. Press  to select the name.
9. If more than one directory number/SIP extension: scroll to the desired directory number/SIP extension, and press .
10. Press  to send the message.

Clearing Text Field

Use the clear text function, when you are writing a new message and want to start all over.

1. Press  to access the **Message Options** menu.
2. Scroll to **Clear text**, and press .

Saving a New Message in Outbox

You can write a message, and then save it in outbox for later handling.

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **New message**, and press .
4. Write a message, and press  to access the **Message Options** menu.
5. Scroll to **Save message**, and press .
6. Scroll to **Outbox**, and press .

Edit a Message That Has Not Been Sent

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **Outbox**, and press .
4. Scroll to the message you want to edit, and press .

5. Press  to access the **Message Options** menu, and press .
6. Scroll to **Resend**, and press .
7. Edit the text.
8. Press , and press **Send**.

Using Templates

You can create up to 10 templates. When using a template in a message you have two options:

- Use a template when you begin the process.
- Insert a template in a message when you are in the process of writing a message.

To Use a Template When you Begin a Message

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **Settings**, and press .
4. Scroll to **Templates**, and press .
5. Scroll to the desired template, and press .
6. Scroll to **Select**, and press .
7. If relevant, write additional text.
8. Press .
9. Scroll to **Send**, and press .
10. Enter the recipient's number or press  to find the recipient's number.
11. To find a name you can:
 - Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
 - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.
12. Press  to select the name.
13. If more than one directory number/SIP extension: scroll to the desired directory number/SIP extension, and press .
14. Press  to send the message.

To Insert a Template in a Message

1. While in a message, press the ⋮.
2. Scroll to **Use template**, and press ✓.
3. Scroll to the desired template, and press ⋮.
4. Scroll to **Select**, and press ✓.

To Save a New Message as a Template

1. Press ≡ to enter the main menu.
2. Scroll to **Messages**, and press ✓.
3. Scroll to **New message**, and press ✓.
4. Write a message, and press ⋮.
5. Scroll to **Save message**, and press ✓.
6. Scroll to **Templates**, and press ✓.
7. If memory is full, press ✓ to replace an old template.
8. Scroll to the template you want to replace, and press ✓.

Saving a Received Message as a Template

You can save a message from inbox as a template for later use.

1. Press ≡ to enter the main menu.
2. Scroll to **Messages**, and press ✓.
3. Scroll to **Inbox**, and press ✓.
4. Scroll to desired message, and press ✓.
5. Press ⋮.
6. Scroll to **Forward**, and press ✓.
7. Press ⋮.
8. Scroll to **Save message**, and press ✓.
9. Scroll to **Templates**, and press ✓.
10. If memory is full, press ✓ to replace an old template.
11. Scroll to the template you want to replace, and press ✓.

Deleting a Single Template

Use this function to delete a template, or replace the template with a new template when the memory is full.

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **Settings**, and press .
4. Scroll to **Templates**, and press .
5. Scroll to the desired template, and press .
6. Scroll to **Erase**, and press .
7. Press  again to erase the template.

Reading Messages

To Read a Message

When a message arrives, a green envelope icon, the text message and the contact information (if available) appear in the display.

- Scroll up and down pressing **top or bottom of the navigation key** to read the entire message.

If you have an unread message in your inbox, this icon  is displayed in the status line.

To Save a Message (Remove from Display)

When the green envelope image appears in the display, press . The message is stored in the inbox as unread. To store it in the inbox and mark it as read, press .

Replying to Messages

Replying to a Message

When you want to reply a message from your inbox, you have the following options:

- Write a new message in an empty screen.
- Write in continuation of original text (received message).
- Insert a template.
- Call back by pressing .

Replying Using an Empty Screen

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **Inbox**, and press .
4. Scroll to the desired received message, and press .
5. Press .
6. Scroll to **Reply**, and press .
7. Scroll to **Empty screen**, and press .
8. Write a message, and press .
9. Scroll to **Send**, and press .
10. Press  to send the message.

Replying in Continuation of Original Text

Original text refers to the received text message.

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **Inbox**, and press .
4. Scroll to the desired received message, and press .
5. Press .
6. Scroll to **Reply**, and press .
7. Scroll to **Original Text**, and press .
8. Write a message in continuation of received message, and press .
9. Scroll to **Send**, and press .
10. Press  to send the message.

Reply Using a Template

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **Inbox**, and press .
4. Scroll to the desired received message, and press .

5. Press .
6. Scroll to **Reply**, and press .
7. Scroll to **Templates**, and press .
8. Scroll to the desired template, and press .
9. Scroll to **Select**, and press .
10. If relevant, write additional text.
11. Press .
12. Scroll to **Send**, and press .
13. Press  to send the message.

Calling the Phone that Sent a Message

You can call back the phone that sent a message. You can do this when a message arrives, or when you are in the message inbox:

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **Inbox**, and press .
4. Scroll to the desired received message, and press .
5. Press  to initiate the call.

Forwarding a Message

If you want to forward a message to a contact, do the following:

1. Press  to enter the main menu.
2. Scroll to **Messages**, and press .
3. Scroll to **Inbox**, and press .
4. Scroll to the desired received message, and press .
5. Press .
6. Scroll to **Forward**, and press .
7. Press , scroll to **Send**, and then press .
8. Enter the recipient's number or press  to find the recipient's number.
9. To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly, press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name.

10. Press ✓ to select the name.

11. Press ➤ to send the message.

Resending a Message

If you want to resend a message to a contact, do the following:

1. Press ≡ to enter the main menu.
2. Scroll to **Messages**, and press ✓.
3. Scroll to **Sent Messages**, and press ✓.
4. Scroll to the desired message, and press ✓.
5. Press ⋮.
6. Scroll to **Resend**, and press ✓.
7. If relevant, write additional text.
8. Press ⋮.
9. Scroll to **Send**, and press ✓.
10. Press ➤ to send the message.

Deleting Messages

Deleting a Single Message

The handset automatically deletes the oldest message when the inbox and outbox memory is full.

If you want to delete a message manually, do the following:

1. Press ≡ to enter the main menu.
2. Scroll to **Messages**, and press ✓.
3. Scroll to **Inbox** or **Sent Messages**, and press ✓.
4. Scroll to the desired message, and press ✓.
5. Press ⋮.

6. Scroll to **Erase**, and press ✓.
7. Press ✓ to delete the message.

Deleting All Read Messages from Inbox

Use this function to delete all read messages from inbox. This way you do not risk deleting unread messages.

1. Press ≡ to enter the main menu.
2. Scroll to **Messages**, and press ✓.
3. Scroll to **Erase messages**, and press ✓.
4. Scroll to **All read messages**, and press ✓.
5. Press ✓ to delete all read messages from inbox.

Delete All Messages from Inbox or Outbox

Use this function to delete all messages from your inbox or outbox.

1. Press ≡ to enter the main menu.
2. Scroll to **Messages**, and press ✓.
3. Scroll to **Erase messages**, and press ✓.
4. Scroll to **Inbox** or **Outbox**, and press ✓.
5. Press ✓ to delete all messages from inbox or outbox.

Delete All Messages

Use this function to delete all messages from inbox and outbox.

1. Press ≡ to enter the main menu.
2. Scroll to **Messages**, and press ✓.
3. Scroll to **Erase messages**, and press ✓.
4. Scroll to **All**, and press ✓.
5. Press ✓ to delete all messages from all folders.

Audio

The Audio menu contains all the options related to adjusting the sound output of your handset, in addition to other call quality related settings.

**Note:**

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them if a change is needed.

Ringling tone

The ring tone is followed by a number indicating the chosen tone of the ringer. It is possible to choose between 12 different ring tones. The last two ring tones are suitable for noisy environments. You can distinguish between an internal and external call by the ring tone. The ring tone of an internal call is followed by three short beeps (system dependent feature).

To Choose a New Ring Tone

1. Press **≡** to enter the main menu.
2. Scroll to **Audio**, and press **✓**.
3. Scroll to **Ring tone**, and press **✓**.
4. Scroll to the desired ring tone, and press the **right side of the navigation key** to listen to the ring tone. Repeat the process if you want listen to other ring tones.
5. Press the **left side of the navigation key** to listen to the internal calls ring tone (system dependent feature).
6. Scroll to the desired ring tone, and press **↔** to select the new ring tone.

**Note:**

If you cannot hear the ring tones, check that Silent mode is turned off.

Ringling volume

To Adjust the Volume of the Ring Tone

1. Press **≡** to enter the main menu.
2. Scroll to **Audio**, and press **✓**.
3. Scroll to **Ring tone**, and press **✓**.

4. Press the **left or right side of the navigation key** to adjust the volume of the ring tone.
5. Press ✓ to save the changes.



Caution:

Do not hold the handset next to your ear when it is ringing as you can risk serious and permanent damage to your hearing.

Profiles

Silent mode

When silent mode is turned on, there is no sound for incoming calls and notifications. However, you will still be able to see an incoming call and notifications in the display.

To Turn Silent Mode On/Off

1. Press ≡ to enter the main menu.
2. Scroll to **Profile**, and press ✓.
3. Scroll between the three profiles (Default/Vibrate only/Silent) and press ✓ on the profile you want to activate.

Alternatively

1. Press ≡ to enter the main menu.
2. Scroll to **Audio**, and press ✓.
3. Scroll to **Silent**, and press ✓.
4. Scroll between **On** or **Off** using ⇄.



Timesaver:

Alternatively, you can also turn silent mode on/off by pressing # while in the **Menu**.

Changing Silent Mode Settings

When silent mode is turned on, you can select other ways of indicating incoming calls or messages:

- **Display flashing:** When turned on, the display flashes when an incoming call arrives.
- **Vibrate:** When turned on, the handset vibrates when an incoming call arrives.
- **Short ring:** When turned on, a short ring sounds when an incoming call arrives.

To Change Silent Mode Settings

1. Press **≡** to enter the main menu.
2. Scroll to **Audio**, and press **✓**.
3. Scroll to **Silent**, and press **✓**.
4. Scroll to **Settings**, and press **✓**.
5. Scroll to the desired setting, and press **✓** to enable it.

Audio Settings

Out of Range

The out of range indicator appears when handset is moving out of range or already is out of range of base station.

With the out of range indicator turned on, when the handset is moving out of range (the signal quality being low) or when the handset gets completely out of range (no handset signal), the no signal icon will appear in the display. If the “tone + icon” option is selected, beep sounds will be heard when the handset comes out of range.



Note:

When the handset has been outside the range area, it can take up to 30 seconds before the handset is back on the system after re-entering range area.

To Turn Out of Range Indicator On/Off

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Audio**, and press **✓**.
4. Scroll to **Out of range**, and press **✓**.
5. Scroll between **On** or **Off** using **↔**.

To Change Out of Range Settings

When out of range is turned on, the handset offers two types of out of range alerts: Icon only and Tone (beep) + Icon.

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Audio**, and press **✓**.
4. Scroll to **Out of range**, and press **✓**.
5. Scroll to **Settings**, and press **✓**.
6. Scroll to the desired alert, press **✓** to save your selection.

Audio Environment

The audio environment settings allow the user to adapt the handset audio quality, in regards to the noise levels in the background environment. (e.g. the noisy profile would be more suitable for a noisy environment)

1. Press **≡** to enter the main menu.
2. Scroll to **Audio**, and press **✓**.
3. Scroll to **Audio Environment**, and press **✓**.
4. Scroll between **Noisy Profile**, **Quiet Profile**, or **Normal Profile**, and press **✓** to change your profile.

Hearing Aid Comp

Your handset has a hearing aid compatibility mode that adjusts the frequency response for users who have hearing aids equipped with telecoil inductive pickups. Acoustic pickup hearing aids will not respond to this adjustment.

To View Status of/Enable/Disable HAC

1. Press **≡** to enter the main menu.
2. Scroll to **Audio**, and press **✓**.
3. Scroll to **Settings**, press **✓**.
4. Scroll to **HAC** (Hearing Aid Comp), press **✓** to enable or disable **HAC**.

Country Dial Tones

You can change the call progress tones (busy/dial/ringback tones) in your handset. You can change them even if you are in a different area than the chosen call progress tone.

To Change Country Dial Tones

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Audio**, and press **✓**.
4. Scroll to **Country Dial Tones**, and press **✓**.
5. Scroll to the desired option, and press **↔**.

Bluetooth

Bluetooth allows you to connect the handset to a compatible device with Bluetooth connectivity within 10 meters (32 feet). When a wireless headset is connected to the Spectralink S35 Handset, you can perform the following actions.

To Activate the Bluetooth Function

1. Press **≡** to enter the main menu.
2. Scroll to **Audio**, and press **✓**.
3. Scroll to **Bluetooth Headset**, and press **✓**.
4. Scroll to **Active**, and press **✓**.
5. Scroll to **On** and press **↔**. The Bluetooth function is now activated.

Pair Wireless Headset with the Handset

**Note:**

Bluetooth function must be set to **On**.

When setting up a Bluetooth connection, you will need to search for a compatible device with Bluetooth connectivity in order to pair this device to your handset.

You will need a pin code of 1-16 numeric characters. (Consult the user guide of the Bluetooth headset for the pin code information).

You are only asked to enter this pin code the first time you connect to the device. The Bluetooth icon appears in the handset display when a wireless headset is connected.

1. Press **≡** to enter the main menu.
2. Scroll to **Audio**, and press **✓**.

3. Scroll to **Bluetooth Headset**, and press ✓.
4. Scroll to **Search** to search for compatible Bluetooth headset, and press ✓.
5. Select the headset code number listed in the display of the handset, press ✕ when the appropriate device is found, then press + to add the headset.
6. Enter pin code, and press ✓.
7. After the pairing is complete, press ✓. The wireless headset is now connected to your handset

Deactivate Bluetooth

1. Press ≡ to enter the main menu.
2. Scroll to **Audio**, and press ✓.
3. Scroll to **Bluetooth Headset**, and press ✓.
4. Scroll to **Active**, and press ✓.
5. Scroll to **Off** and press ⇌. Bluetooth is now deactivated, and any Bluetooth device connected to the handset has now been disconnected.

Activate Bluetooth Again

1. Press ≡ to enter the main menu.
2. Scroll to **Audio**, and press ✓.
3. Scroll to **Bluetooth Headset**, and press ✓.
4. Scroll to **Device list**, and press ✓.
5. When prompted to turn on the Bluetooth, press ✓.
6. After a short wait, your previously paired devices will be displayed.
7. Press ⋮ and scroll to **Connect**.
8. Press ✓ to connect to the headset again.

Remove Wireless Headset from the Device List

1. Press ≡ to enter the main menu.
2. Scroll to **Audio**, and press ✓.
3. Scroll to **Bluetooth Headset**, and press ✓.
4. Scroll to **Device list**, and press ✓.

5. Press , and scroll to **Delete**.
6. Press  to remove the headset from the device list.

Auto Connect

It is possible to connect automatically to paired devices.

1. Press  to enter the main menu.
2. Scroll to **Audio**, and press .
3. Scroll to **Bluetooth Headset**, and press .
4. Scroll to **Active**, and press .
5. Scroll to **Settings**, and press .
6. Scroll to **Auto connect**, and press . The wireless headset will now connect automatically to the handset when the headset is turned on.

Wireless Headset Volume

When the handset is on hook, it is possible to adjust the start speaking volume of the wireless headset.

1. Press  to enter the main menu.
2. Scroll to **Audio**, and press .
3. Scroll to **Bluetooth Headset**, and press .
4. Scroll to **Active**, and press .
5. Scroll to **Settings**, and press .
6. Scroll to **Headset volume**, and press .
7. Press the **left or right side of navigation key** to adjust the volume.
8. Press  to save the changes.

Switch Between Wireless Headset and Handset

When the headset is active and the handset is in a call, the audio can be switched between the headset and the handset.

- If headset is active, press , scroll to **Audio to handset**, and press .
- If handset is active, press , scroll to **Audio to headset**, and press .

Last Number Redial

Consult the user guide of the wireless headset for last number redial instructions.

Settings

Settings offer you the opportunity to customize the handset according to your needs. The settings can be changed at any time.

**Note:**

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them if a change is needed.

Messaging

Message List Content

You can define whether your list of MSF messages in the inbox/outbox is to show the call back number (or contact number if number is in the contact list) or part of the text message.

1. Press  to enter the main menu.
2. Scroll to **Settings**, and press .
3. Scroll to **Messaging**, and press .
4. Scroll to **Message list Content**, and press .
5. Press  to select between the options.

Message Alert Volume

Alerts are different tones that appear during notifications and events, e.g.:

- You receive a new message.
- You send a message.
- The handset is moving out of range.
- The handset is out of range.
- The battery capacity is low.
- You create a login.

**Note:**

The message alert volume is not related to Alarm features and task messages.

To Adjust Message Alert Volume

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Messaging**, and press **✓**.
4. Scroll to **Alert volume**, and press **✓**.
5. Press the **left or right side of the navigation key** to adjust the message alert volume.
6. Press **✓** to save the changes.



Note:

You cannot set vibrate to work with message alerts.

MSF Tones in a Call

When receiving an MSF type I/II while in a call, you can define the following options for the MSF tone: **Normal**, **Key click** (key click sound is played), **Key beep** (key beep sound is played) and **Vibrate**. You can choose **Vibrate** in connection with one of the other options.



Note:

Choosing **key beep** or **key click** overrides settings for the MSF message about alerts – if the handset is in a call.

To Set MSF Tones for MSF type I/II

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Messaging**, and press **✓**.
4. Scroll to **MSF Tones in a call**, and press **✓**.
5. Scroll to the desired option, and press **↔** to enable it. You can choose **Vibrate** in connection with one of the other options.

Rolling Tasks

It is possible to change settings for the rolling task list. E.g. how often the task sound is played (if any) and how often the task list is changing to the next task

To Change Rolling Task Settings

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Messaging**, and press **✓**.
4. Scroll to **Rolling Tasks**, and press **✓**.
5. To change the period of time in seconds before changing to the next task, scroll to **Time in sec**, and press **the left or right side of the navigation key**. If you define the setting to e.g. 5, the next task is shown in the display after 5 seconds.
6. To change the task sound interval, scroll to **Indication interval**, and press the **left or right side of the navigation key**. If you define the setting to e.g. 1, the task sound will occur every second time a task message is shown in the display.
7. Press **↓** to save the changes.

Handset

Changing Language

The following predefined languages are available in the handset: English, Spanish, French, German, Dutch, Czech, Italian, Danish, Norwegian, Swedish, Polish, Finnish, Russian, Turkish and Portuguese.

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Languages**, and press **✓**.
5. Scroll to the desired language, and press **✓**.

Backlight

To save power the backlight can be set to automatically either dim or turn off. This will happen after the handset has been idle for a configurable time delay.

The display backlight automatically turns on again when e.g. an incoming call or message arrives, or if a key is pressed.

The backlight turns off when handset is idle after a preset period of time delay.

The time delay can be adjusted between eight levels. The highest level will result in infinite time delay, and the backlight will never dim or turn off. The other levels will dim with different time delays.

The default delay setting is 5 seconds. The delay can be adjusted between 2 - 15 seconds.



Note:

Turning display backlight off when handset is idle will save battery power.

Setting Backlight to Automatically Dim or Turn Off

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Backlight**, and press **✓**.
5. Press **↔** to set backlight to **Dimmed** or **Off**.

Turning Backlight Automatically On

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Backlight**, and press **✓**.
5. Press **↔** to set backlight to **Dimmed**. Backlight is now turned on.

Adjusting Backlight Delay

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Backlight**, and press **✓**.
5. Scroll to **Delay**, and press **✓**.
6. Press the **left and right side of the navigation key** to adjust backlight delay.
7. Press **✓** to save the changes.



Note:

If adjusting backlight delay to maximum, then the backlight never turns off!

Using Long Key

The long key function supports system features and defines a long key press to digits between 0-9. The long key press can be defined as [speed dials](#) or as predefined MSF signals.

MSF signals are system dependent. The MSF signal is sent to a server and not a specific number. If supported by the subscribed system, an MSF signal sent to the system could for example return system features to the handset. Contact your system administrator for more information.

Speed dials are phone calls. For speed dials you can define **Push to talk**, meaning that talking requires pressing left softkey while talking. When not pressing the left softkey you are muted. For more information, see "[Handset Keys](#)" on page 17.



Note:

The long key function is not related to Alarm features.

To Change Long Key Definition

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Long key**, and press **✓**.
5. If you want to have all digits between 0-9 set as either Speed dial or MSF, press **↔** to select either **Speed dial** or **MSF**.

If **Speed dial** is selected, you can also define **Push to unmute** for the relevant digit under the **Settings** menu. Scroll to the **Settings** menu below, select relevant Speed dial, and press **↔**, scroll to **Push to unmute**, and press **↔** again.

6. If you want to define individual settings for each digit (a mix of Speed dial and MSF), scroll to the **Settings** menu below, and define the relevant action for each digit.

About

Information

You will find general handset information about:

- Model type/name (if available)
- IPEI number of the handset (International Portable Equipment Identity)
- Firmware version

- Hardware version
- Bluetooth (MAC address for Bluetooth and Bluetooth software version)
- Unique Product ID (P-ID)
- Frequency band (frequency band of handset)
 - Standard handsets:
 - Europe
 - NZ Power
 - North America
 - DECT 6.0
 - Frequency swap handsets:
 - 1G8
 - 1G9
 - SAM
- Item number

To Check Signal Strength Values

1. Press  to enter the main menu.
2. Scroll to **Settings**, and press .
3. Scroll to **System**, and press .
4. Scroll to **Signal Strength**, and press .

Call options

Auto Answer

When auto answer is turned on, the handset automatically goes off hook when an incoming call arrives.

If subscribed to a Spectralink wireless solution, the handset automatically goes on hook when calls are ended.

To Turn Auto Answer On/Off

1. Press  to enter the main menu.

2. Scroll to **Settings**, and press ✓.
3. Scroll to **Call Options**, and press ✓.
4. Scroll to **Auto answer**, and press ✓.
5. Press ⇌ to select between **On** or **Off**.

Changing Auto Answer Settings

When auto answer is turned on, you can select different situations where to use auto answer during incoming calls.



Note:

If **Absent in charger** is set to **On**, this setting overrules any **Auto Answer** settings.

Auto Answer Settings

- **Lift from charger:** The handset automatically answers the call when removed from charger
- **After 1 ring:** The handset automatically answers the call after the first ring.
- **When headset:** The handset automatically answers the call, when you are using a headset.
- **Loudspeaker on:** The handset automatically answers the call and turns on loudspeaker.
- **Also in charger:** The handset automatically answers the call when placed in charger.

To Change Auto Answer Settings

1. Press ≡ to enter the main menu.
2. Scroll to **Settings**, and press ✓.
3. Scroll to **Call Options**, and press ✓.
4. Scroll to **Auto answer**, and press ✓.
5. Scroll to **Settings**, and press ✓.
6. Scroll to the desired setting, and press ✓.

Absent in Charger

When absent in charger is turned on, the absent in charger icon appears in the display when handset is placed in charger.



Note:

If **Absent in charger** is set to **On**, this setting overrules any **Auto Answer** settings.

To Turn Absent in Charger On/Off

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Call Options**, and press **✓**.
4. Scroll to **Absent in charger** and press **↔** to select between **On** or **Off**.

Missed Calls

It is possible to get notifications of missed calls shown in the display. If **Show missed calls** is turned on, the missed calls icon shows in the display. To see details about the missed calls, you can press **Details**.

To Show/Hide Missed Calls

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Call Options**, and press **✓**.
4. Scroll to **Show missed calls** and press **↔** to select between **On** or **Off**.

Flash LED on Call

You can set your handset LED to flash when receiving an incoming call.

To Set Flash LED to On/Off

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Call Options**, and press **✓**.
4. Scroll to **Flash LED On Call** and press **↔** to select between **On** or **Off**.

Security

DECT Security

You can monitor the DECT system security state if encryption is enabled on the server. It is only if encryption is enabled, that you can monitor if system security state has changed (encryption being disabled). A notification is shown in the display.

**Note:**

If the system security state changes during a call, the ongoing call will still be encrypted. The subsequent calls will not be encrypted and will end after 15 sec if the handset is not power cycled. Further power cycles will ensure the handset can only make unencrypted calls until encryption is enabled on the server again. Contact your system administrator for more information.

To Monitor System Security State

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Security**, and press **✓**.
4. Scroll to **DECT Security**, and press **✓**.
5. Press **↔** to select between **On** or **Off**.

System

Register (Subscription)

Before you can use the registered handset, it is necessary to subscribe the handset to a system (register). The handset can be subscribed to up to 15 different systems.

Selecting a system

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **System**, and press **✓**.
4. Scroll to **Subscription**, and press **✓**.
5. Scroll to **Select system**, and press **✓**.
6. Scroll to the desired login, and press **✓**.

Removing a system

Registrations can be removed from the system in use and from the 14 other systems (if connected). A password is required to remove a login. The default password is factory set at 0000.

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **System**, and press **✓**.
4. Scroll to **Subscription**, and press **✓**.
5. Scroll to **Delete System**, and press **✓**.
6. Scroll to the desired registration, and press **✓**.
7. Enter your password, and press **✓**.
8. If the system in use is removed, it is necessary to select one of the remaining systems or to subscribe to a new one.

Creating a Registration (Subscription)

To create a registration, the system must allow subscriptions to be made. Some systems also require an Authentication Code (AC). You can create a registration by entering the ARI of the system directly/manually or by performing a search for a system. If more than one system currently permits subscription, you will need to know the ID of the system to which you want to subscribe. Authentication Codes and system ID's will be provided by the system administrator.

You can subscribe up to 15 different systems, meaning that you can create 15 registrations.



Note:

If the handset is already subscribed to 15 systems, you will have to remove a subscription before creating a new one.

To Create a Registration by Searching for the System

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **System**, and press **✓**.
4. Scroll to **Subscription**, and press **✓**.
5. Scroll to **Search New System**, and press **✓**. The handset will start searching for a system.

6. Scroll to the relevant system, and press ✓.
7. If required, enter an AC Code and User ID and press ✓ to connect to the system.
8. Press ✓ again to confirm.

To Create a Registration by Entering the ARI of the System Directly

1. Press ≡ to enter the main menu.
2. Scroll to **Settings**, and press ✓.
3. Scroll to **System**, and press ✓.
4. Scroll to **Subscription**, and press ✓.
5. Scroll to **Manually Add System**, and press ✓.
6. Enter the relevant ARI. Contact your system administrator for more information.
7. If required, enter an AC Code and User ID.
8. Press ✓. The handset will start searching for a system with the entered ARI.
9. Press ✓ again to confirm.

Signal Strength

This feature can be used to check the signal strength of the base stations and the signal quality of the handset while in a call.

To Check RSSI Values

1. Press ≡ to enter the main menu.
2. Scroll to **Settings**, and press ✓.
3. Scroll to **System**, and press ✓.
4. Scroll to **Signal Strength**, and press ✓. The bearer quality is shown in the display.

Handset

Time & Date

When you turn off the handset, time and date settings are deleted if the subscribed system does not resend the information to the handset.

Choose Time Format

You can choose between the two formats: **24 hours** or **12 hours**.

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Time & date**, and press **✓**.
5. Scroll to **Time format**, and press **✓**.
6. Press **↔** to select between the options.

Change Time

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Time & date**, and press **✓**.
5. Scroll to **Change time**, and press **✓**.
6. Place cursor on the digit, you want to change by pressing the **left or right side of the navigation key**.
7. Press a digit. The cursor will then automatically jump to the next digit.
8. Press **✓** to save the changes.

Choose Date Format

You can choose between the date formats: **MM/DD/YYYY**, **DD/MM/YYYY** or **YYYY-MM-DD**.

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.
4. Scroll to **Time & date**, and press **✓**.
5. Scroll to **Date format**, and press **✓**.
6. Scroll to the desired option, and press **↔**.

Change Date

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Handset**, and press **✓**.

4. Scroll to **Time & date**, and press ✓.
5. Scroll to **Change date**, and press ✓.
6. Place cursor on the digit, you want to change by pressing the **left or right side of the navigation key**.
7. Press a digit. The cursor will then automatically jump to the next digit.
8. Press ✓ to save the changes.

Alarm button



Note:

If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

Workers can be at risk during security breaches or if personal incidents require immediate attention. On the S35, personal monitoring is provided for the Alarm button.

The Alarm button is located on the **top of the handset**. It provides an alarm and/or instantaneous calling to any number speed-dial associated from the phonebook. This number must first be added to the phonebook, then “speed dial A” associated to the name in the phonebook. For more information, see **"Adding a New Contact to Contacts"** on page 52 and **"Adding a Number to Speed Dial"** on page 57.

The emergency call feature can be programmed to work with the Alarm button. It can be programmed to activate the loudspeaker if an emergency call is placed.

The Alarm button can be coupled with a security alarm application program which can be programmed to receive the alarm and identify the handset, the user and the location of the alarming handset along with other functionalities.

Contact your system administrator for full information about how personal safety applications are deployed in your facility.

Using the Alarm Button

When you press the Alarm button on **top of the handset**, the alarm state is entered. A loud warning tone may sound and a call may be placed to any number speed-dial associated from the phonebook.

Activating the Alarm Button

The Alarm button can be configured in several different ways. Contact your system administrator to find out which of these setting is active in your application:

- Is the Alarm button activated by a long press, two short presses or either?
- Does pressing the Alarm button place an emergency call?
- Does pressing the Alarm button sound an alarm through your handset's speakerphone?
- When an emergency call is placed, does the audio come through the speakerphone?

**Note:**

An emergency call preempts and terminates any existing active call. The emergency call is ended by hanging up the call, as with a normal call, or by the far end hanging up. However, the handset remains in the alarm state until manually cleared by the user.

Defining Alarm Settings

To Change Alarm Settings for the Alarm Button

1. Press **≡** to enter the main menu.
2. Scroll to **Settings**, and press **✓**.
3. Scroll to **Messaging**, and press **✓**.
4. Scroll to **Alarms**, and press **✓**.
5. Select **Alarm Key** and press **✓**.
6. Scroll to either **Send MSF** or **Speed Dial** and press **↔**.

If choosing **Speed Dial**, you can also activate **Loudspeaker**.

**Note:**

If you have defined the Alarm button to work with **Speed dial**, “A. empty” is shown in the Speed dial list in the Phone Book menu, and you can define a number to be dialed when pressing the Alarm button.

Updating Firmware



Note:

Contact your distributor for the newest firmware.

The handset firmware can be updated in the following ways:

- Over the Air (SUOTA - Software Update Over The Air) through the web based Administration Page of the Spectralink IP-DECT Server.

Product Compatibility

If you have any questions about product compatibility, contact your system administrator.

Use only Spectralink Handset with other Spectralink products as identified by the type approval model ID and/or part number located on the label of the product.

Spectralink S33, S35, S37	
Spectralink S33 Handset	K030
Spectralink S35 Handset	K031B
Spectralink S37 Handset	K031A
S3x Charger Base	72685110
S33 Dual Charger Base	72685210
S35/S37 Dual Charger Base	72685310
S3x Series Handset Management Cradle	72685410
S3x Series Desktop Multi-Charger for 6 Handsets	72685610

Technical Specifications

System

- ARM926E-S 32bit RISC Processor +BMP
- FLASH 32MB
- SRAM 2MB

Battery

- 1800mAh capacity
- Battery charge time under 4 hours
- Easy battery change and replacement
- Battery lifetime under proper charge and discharge conditions: two years or 500 charging cycles

Buttons

- 4+1 illuminated navigation key
- Alarm key (top)
- Side key (programmable function)
- 3 Soft keys (LCD defined function)
- Volume Up/Down keys
- 12-key illuminated Numerical keypad
- Illuminated Dial key (off hook)
- Illuminated On Hook key (hangup + power on/off)
- Illuminated Speaker Phone key
- Illuminated Line key
- Easily operated with gloves

Display

- 2.4" color QVGA 240x320
- Luminance > 310 cd/m²

Audio

- Noise cancellation (two microphone) at office, pub, factory and warehouse noise profiles
- Ultrasonic mic support (18-21kHz)
- Full Duplex Loudspeaker: Voice 90 dBSPL@10cm, Ringer 93 dBSPL@10cm

- Wideband audio support
- HAC T3/M3
- Headset connection: 3.5mm, CTIA, 4-button support
- Low Impedance Headset amplifier
- Speaker and mic ports easily cleaned or protected from debris (metal fillings, lint, etc.)

Interface and Features

- Vibrator > 2g, dominate perpendicular to keypad
- Charging contacts (5x pads at bottom of handset)
- Whole device easily disinfected
- Multi-color Status LED
- Non-Slip body
- Supports ISO 22196 (2nd Ed) / JIS-Z2801
- Sleep Mode
- DECT Security Step C

Wireless

- Multi DECT – 1880 to 1920 MHz
- Full Slot DECT radio
- Fast Diversity FAD
- TX diversity (follow RX)
- Full ¼ wave antennas (Efficiency >60%, <6dB H&H degradation)
- Best RX performance
- Bluetooth 5.1 (HS, EHS, SMART & BLE)
- Bluetooth >10m range
- NFC reader & card emulator (IEC14443)
- LF location module (proprietary system)

Approvals

- EMC: EN 301 489 – 1
- Radio: EN 301 406, EN 300 328
- Safety: EN 62368, WEEE, RoHS

- Shipping: UN38.1 transport
- National: CE, FCC, CA, AU/NZ, UKCA, EAC(Russia)

Size and weight

- 5.9 x 2 x 0.8 in. (150 x 52 x 20mm)

Speech / Standby time

- Active talking time up to 24 hours (16 hours with Bluetooth enabled)
- Standby time up to 160 hours (120 hours with Bluetooth enabled)

Environmental

- Operational temperature -20° to 55° C (-4° to 131° F)
- Storage temperature: -40° to 70° C (-40° to 158° F)
- Altitude: 3km

Durability

- Mil Spec 810H drop test: Drop from 1.5m per Spectralink Standard
- IEC 60068-2-32: drop x12 from 1m
- Tumble test: 1000 x 0.5m
- Recessed display for screen protection
- Keypad and buttons > 200k cycles
- RCA Abrasion 75 cycles
- Salt/fog atmosphere resistance
- IP65
- Resistance to Chemical Exposure
- Materials used: health grade resin

FCC Compliance Statement

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

If this equipment [US: 24DIPNANIYG97XX] causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

Do not attempt to repair the device. If trouble is experienced with this equipment [US: 24DIPNANIYG97XX], for repair or warranty information, service can be facilitated through our office at:

U.S. Agent Company name: Spectralink Corporation
Address: 2560 55th Street, Boulder CO 80301, USA
Support Telephone #: +1 (800) 775-5330
Email: Support@Spectralink.com

If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If the telephone company requests information on what equipment is connected to their lines, inform them of:

- a) The ringer equivalence number [N/A]
- b) The USOC jack required [N/A]
- c) Facility Interface Codes ("FIC") [N/A]
- d) Service Order Codes ("SOC") [N/A]
- e) The FCC Registration Number [US: 24DIPNANK030]

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are

the REN without a decimal point. For this product the FCC Registration number is [US: 24DIPNANK030] indicates the REN would be NAN.

Industry Canada Compliance Statement

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

Le présent produit est conforme aux spécifications techniques applicables d'Innovation, Sciences et Développement économique Canada.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should not exceed the equivalent isotropically radiated power (EIRP) necessary for successful communication.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.